

Single Groove (pump sold separately)

### **FEATURES**

- Special e-coating offers 3 to 6 times better corrosion resistant finish.
- Special bearings with unique grease offer more consistent viscosity at high temperatures and better water resistance for harsh environments.
- Special projection welded coil and plate offers extra durability in heavy vibration applications.
- Superior strength forged rotor, hub and armature offer superior flux and maximum torque for long life.

**SELECTION:** Select the clutch to match the pump shaft size and belt horsepower rating. Single and double groove are available for increased horsepower requirements. The clutch is very easy to install.

### INSTALLATION:

- 1. Remove the four bearing cover screws on pump and discard.
- Line up the clutch plate with the bearing cover screw holes with the dish side out. Secure with four flanged centering screws (M6-3CP, 3FR, 3PFR, 4FR, 5FR, 5PFR) (M8-5CP) and torque per specifications.
   Do not use pump bearing cover screws.
- 3. Mount the coil assembly onto the clutch plate and secure with four flanged centering screws (1/4"-20x3/8").
- Lubricate the pump shaft with antiseize lubricant and insert the key into the pump shaft.
- Slide the rotor and armature assembly over shaft. Be certain keyway of pump is aligned with armature keyway. Secure with flat washer and shaft screw (M8x25) and torque to specifications.
- Connect the lead wire to the positive side of the electric circuit. Also be certain there is an adequate grounded connection to the coil assembly plate.
- Engage and disengage the clutch to assure proper functioning. If full load is required initially from the pump, allow clutch to engage 20-50 cycles before commencing normal operation for adequate burnishing.

NOTE: Follow standard belt mounting and center distance procedures to determine drive pulley size, speed and horsepower per belt.

# Industrial Clutches

Models 34961, 34964

3FR and 4FR Piston Pumps 3PFR Plunger Pumps

Models 34960, 34965 3CP Plunger Pumps

Models 34962, 34963 5FR Piston and 5PFR Plunger Pumps

Models 34970, 34980 5CP Plunger Pumps

34961

3FR, 3PFR, 4FR

34964

3FR, 3PFR, 4FR

(177.8 x 52.6 mm)

### **SPECIFICATIONS**

Pump Model .....


Dimensions .....

**MODELS** 

Clutch Grooves	1	2
Shaft Size	16.5 mm	16.5 mm
MODELS	34960	34965
Pump Model	3CP	3CP
Clutch Grooves	1	2
Shaft Size	16.5 mm	16.5 mm
MODELS	34962	34963
Pump Model	5FR, 5PFR	5FR, 5PFR
Clutch Grooves	1	2
Shaft Size	20 mm	20 mm
MODELS	34970	34980
Pump Model	5CP	5CP
Clutch Grooves	1	2
	1 20 mm	2 20 mm
Clutch Grooves	•	20 mm
Clutch Grooves Shaft Size  COMMON SPECIFICATIONS	20 mm	20 mm
Clutch Grooves	20 mm  U.S. Measure 7"	20 mm  Metric Measure (177.8 mm)
Clutch Grooves	20 mm  U.S. Measure 7" A	20 mm  Metric Measure (177.8 mm) (A)
Clutch Grooves	20 mm  U.S. Measure 7" A 75 ft./lbs.	20 mm  Metric Measure (177.8 mm) (A) (101.7 Nm)
Clutch Grooves	20 mm  U.S. Measure 7" A 75 ft./lbs. 44	20 mm  Metric Measure (177.8 mm) (A) (101.7 Nm) (44)
Clutch Grooves	20 mm  U.S. Measure 7" A 75 ft./lbs. 44 3.6	20 mm  Metric Measure (177.8 mm) (A) (101.7 Nm) (44) (3.6)
Clutch Grooves	20 mm  U.S. Measure 7" A 75 ft./lbs. 44	20 mm  Metric Measure (177.8 mm) (A) (101.7 Nm) (44)

**OPERATION:** The clutch works with a flow switch, pressure switch or a manual on/off switch installed in the system and connected to a 12VDC power supply. When the trigger gun is released or the unit is manually turned off, a signal is sent to the clutch to disengage and cease pump operation. When operation resumes by opening the trigger gun or manually turning the system on, the clutch will engage, starting the pump and resuming full operation.

7.0" x 2.07"

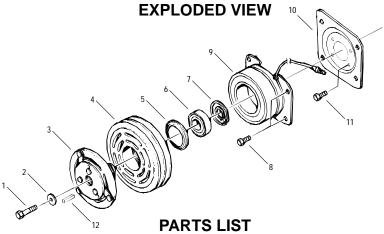

						-					
ITEM	DESCRIPTION				M	ODEL NUMB	ER				QTY
		MATL	34960	34961	34962	34963	34964	34965	34970	34980	
1	Screw, Shaft, HH Sems (M8x25)	STZP	† 92530	† 92530	† 92530	† 92530	† 92530	† 92530	† 92530	† 92530	1
	Screw, Shaft, HH Sems (M8x25)	STCP R	126544	126544	126544	126544	126544	126544	126544	126544	1
2	Washer, Retaining Bolt	STZP R	_	_	126579	126579	_	_	126579	126579	1
3	Armature	_	_	_	_	_	_	_	_	_	1
4	Rotor	_	_	_	_	_	_	_	_	_	1
5	Seal	_	_	_	_	_	_	_	_	_	1
6	Bearing	_	_	_	_	_	_	_	_	_	1
7	Ring, Šnap	_	_	_	_	_	_	_	_	_	1
8	Screw, Coil Assembly	STZP	_	_	_	_	_	_	_	_	4
9	Assembly, Coil	_	_	_	_	_	_	_	_	_	1
10	Plate, Clutch	STZP	_	_	_	_	_	_	_	_	1
11	Screw (M6/M8)	STZP	_	_	_	_	_	_	_	_	4
12	Key	STL	30089	30089	30057	30057	30089	30089	30057	30057	1
_	Lubricant, Antiseize	_	6106	6106	6106	6106	6106	6106	6106	6106	1


Note: Add C1 (single) or C2 (dual) to standard pump model for ordering pump and clutch assembly. † Replacement parts are different than service parts (standard shaft screw is a socket head, replacement is a hex head). Apply blue Loctite® 242® to threads when using replacement screw.

R Components comply with RoHS Directive. Material Codes (Not Part of Part No.): STL=Steel STCP=Steel/Chrome Plated STZP=Steel/Zinc Plater Loctite and 242 are trademarks of the Henkel Corporation.

—— TORQUE F	REQUII	REME	ENTS	_
	Thread	Tool		To
	Size	Size	in.lbs.	ft

Item	Thread Size	Tool Size	in.lbs.	Torque ft.lbs.	Nm
Plate Screws (3CP, 3FR, 3PFR, 4FR, 5FR, 5PFR)	M6	M8 Hex	55	4.4	6.2
Plate Screws (5CP)	M8	M10 Hex	115	9.4	13
Coil Assembly Screws	1/4"	3/8" Hex	55	4.4	6.2
Shaft Screw	M8	M6 Allen or M13 Hex	115	9.4	13

TROUBLESHOOTING				
113	OODLLOIIOOTIIIO			
Clutch will not engage	<ul><li>Check positive and ground connections.</li><li>Check for 12 VDC.</li></ul>			
Squealing belt(s)	<ul> <li>Check belt slippage or belt tension.</li> </ul>			
Short belt life	<ul> <li>Check side-to-side alignment and belt tension.</li> <li>Undersized belts; upgrade to dual clutch.</li> </ul>			
Excessive noise when clutch disengaged	Worn bearing; replace clutch assembly.			
Clutch cycling	<ul><li>Check for adequate voltage.</li><li>Worn rotor or discolored rotor surface; replace clutch assembly.</li></ul>			
Scraping noise when clutch engaged and/or	<ul> <li>Check alignment of coil and rotor assembly.</li> </ul>			

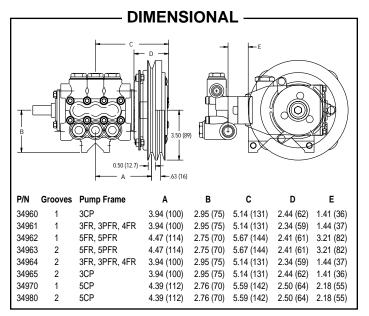

## WARRANTY 90 Day Warranty

Refer to complete CAT PUMPS Warranty for further information.

Products described hereon are covered by one or more of the following U.S. patents 3558244, 3652188, 3809508, 3920356, 3930756 and 5035580

### World Headquarters **CAT PUMPS**

disengaged.

1681 - 94th Lane N.E. Minneapolis, MN 55449 - 4324 Phone (763) 780-5440 — FAX (763) 780-2958 e-mail: techsupport@catpumps.com www.catpumps.com

> International Inquiries FAX (763) 785-4329

e-mail: intlsales@catpumps.com



### CAT PUMPS (U.K.) LTD.

1 Fleet Business Park, Sandy Lane, Church Crookham FLEET, Hampshire, GU52 8BF, England Phone Fleet 44 1252-622031 — Fax 44 1252-626655 e-mail: sales@catpumps.co.uk

#### N.V. CAT PUMPS INTERNATIONAL S.A.

Heiveldekens 6A, B-2550 Kontich, Belgium Phone 32-3-450.71.50 — Fax 32-3-450.71.51 e-mail: cpi@catpumps.be www.catpumps.be

### CAT PUMPS DEUTSCHLAND GmbH

Buchwiese 2, D-65510 Idstein, Germany Phone 49 6126-9303 0 — Fax 49 6126-9303 33 e-mail: catpumps@t-online.de www.catpumps.de