Inlet Strainer – The Inlet Strainer is located between the incoming water quick connect and the wand valve. Remove the inlet strainer screen from the strainer body. Clean or replace the inlet strainer screen as needed.



