

## Pump Repair Kits

|                              |           |
|------------------------------|-----------|
| 1) Switch Assembly           | 94-230-35 |
| 2) Check Valve Assembly      | 94-237-00 |
| 3) Upper Housing             | 94-231-30 |
| 4) Valve Assembly            | 94-232-00 |
| 5) Diaphragm/Lower Housing   | 94-238-03 |
| 6) Motor                     | 11-111-00 |
| 7) Complete Pump Head        | N/A       |
| 8) Upper Housing/Switch Assy | 94-231-20 |

