

Pump Repair Kits

- | | |
|------------------------------------|-----------|
| 1) Complete Pump Head | 94-380-17 |
| 2) Switch Assembly | 94-375-18 |
| 3) Check Valve Assembly | 94-374-09 |
| 4) Upper Housing | 94-379-01 |
| 5) Valve Assembly (Standard) | 94-390-06 |
| 6) Diaphragm | |
| 7) Drive Assembly | |
| 8) Motor | 11-150-10 |
| 9) Valve Assembly (Bypass) | |
| 10) Solid Diaphragm/Drive Assembly | 94-385-32 |

