

Pump Repair Kits

- | | |
|------------------------------------|--|
| 1) Complete Pump Head | 94-382-02 |
| 2) Switch Assembly | 94-375-15 |
| 3) Check Valve Assembly | 94-374-10 |
| 4) Upper Housing | 94-379-01 |
| 5) Valve Assembly (Standard) | |
| 6) Diaphragm | 94-395-16 "Old design" both kits required
Order kit 94-385-31 instead |
| 7) Drive Assembly | 94-385-04 |
| 8) Motor | 11-150-10 |
| 9) Valve Assembly (Bypass) | 94-391-25 |
| 10) Solid Diaphragm/Drive Assembly | 94-385-31 |

