

BOM. 350S/E Blasthead UNI panel 350-9110-UNI

Partno.	Description	Quantity
333-3201	Relay socket 8pins	1
333-3202	Auxilliary relay	1
333-3447	Engine safeguard	1
333-3449	Magnet switch	2
333-3452	Magnet switch	3
333-3462.UNI	Transformer	1
333-3467	Display window ampère meter	1
333-3481	Time relais	1
333-3482	Auxilliary contactor	1
333-3486	Main switch 63A complete	1
333-3493-H	Emergency stop button	1
333-3496	Signal light complete (green)	3
333-3568.1	Impression button (green)	3
333-3569.1	Impression button (red)	3
333-3582	Engine safe guard	1
350-3431-E	Elektrobox 350-UNI (empty)	1
E00350	Circuit breaker (automatic)	1
E00352	Circuit breaker (automatic)	1
E00366	Hour counter	1
E00417	Engine safe guard	1
E00418	Current transformer 25-5A	1
333-3454	Signal light complete (white)	1
350-3484-SE	Ampéremeter 25/5a (incl.scale)	1

BOM 350E drive system 350-3006-E

Partno.	Description	Quantity
E00413	Freq.regulator 400-520V (left)	1
E00414	Freq.regulator 400-520V(right)	1
E00492	Choke	2
E00412	Filter	2
E00415	Freq. reg. program display	1
E00482	Freq.reg. I/O	2
333-3415	Joystick for EBE 350E & 500E	2
500-3190-E	Potential meter 1K	1
454795	Potential meter 10K	1
333-3569.1	Impression button (red)	1
RIG-3625-CDF	Interior bush (6p female)	2
RIG-3626-CDF	Interior pin (6p male)	3
RIG-3616-CDF	Plug hood	2
RIG-3617-CDF	Connect.housing (6p)	3

BOM EBE 350 Dustcollector panel UNI 350-9110-DAUNI

Partno.	Description	Quantity
350-3431-E	Elektrobox 350-UNI (empty)	1
333-3201	Relay socket 8pins	1
333-3202	Auxilliary relay	1
333-3203	Connector	1
333-3204	Connector	1
333-3398	Magnet switch complete	1
E00367	Earth fault detector 30mA/63A	1
333-3445	Breaker	1
333-3447	Engine safeguard	1
333-3448	Engine safeguard	1
333-3449	Magnet switch	3
333-3454	Signal light complete (white)	1
333-3460	Breaker	1
333-3462.UNI	Transformer	1
333-3477	Engine safeguard	1
333-3486	Main switch 63A complete	1
333-3493-H	Emergency stop button	1
333-3496	Signal light complete (green)	3
333-3568.1	Impression button (green)	3
333-3569.1	Impression button (red)	3
333-3570	Voltage guard	1
333-3572	Fase guard	1
E00350	Circuit breaker (automatic)	1
E00352	Circuit breaker (automatic)	1

BOM EBE 500S/E Blasthead UNI panel 500-9110-UNI

Partno.	Description	Quantity
500-3383-SE	Elektrobox (empty)	1
500-3384	Remote control box (empty)	1
333-3486	Main switch 63A complete	1
333-3489	Breaker	1
E00352	Circuit breaker	1
E00366	Hour counter	1
500-3397	Engine safe guard	1
333-3448	Engine safeguard	1
333-3462.UNI	Transformer	1
333-3452	Magnet switch	2
333-3481	Time relais	1
500-3398	Contacteur	2
333-3479	Contacteur	1
E00491	Current transformer	1
E00490	Ampère meter	1
333-3493-H	Emergency stop button	1
333-3568.1	Impression button (green)	3
333-3569.1	Impression button (red)	3
333-3454	Signal light complete (white)	1
333-3201	Relay socket 8pins	1
333-3202	Auxilliary relay	1

BOM 500E drive system 5003006-E-1

Partno.	Description	Quantity
E00413	Freq.regulator 400-520V (left)	1
E00414	Freq.regulator 400-520V(right)	1
E00492	Choke	2
E00415	Freq. reg. program dispay	1
E00482	Freq.reg. I/O	2
333-3415	Joystick for EBE 350E & 500E	2
500-3190-E	Potentio meter 1K	1
454795	Potentio meter 10K	1
333-3569.1	Impression button (red)	2
RIG-3625-CDF	Interior bush (6p female)	2
RIG-3626-CDF	Interior pin (6p male)	3
RIG-3616-CDF	Plug hood	2
RIG-3617-CDF	Connect.housing (6p)	3

BOM EBE 500 Dustcollector panel UNI 500-9110-DAUNI

Partno.	Description	Quantity
E00342	Enclouser	1
E00343	Main switch	1
E00344	Main switch Knob	1
E00345	Main switch 60*60mm AS 8mm	1
E00346	Main switch axle	1
E00347	Main switch	1
500-3528-EDA	Earth fault sensor	1
E00348	Earth fault detection	1
E00350	Circuit breaker (automatic)	1
E00351	Circuit breaker (automatic)	1
E00352	Circuit breaker (automatic)	1
333-3448	Engine safeguard	1
333-3447	Engine safeguard	1
333-3477	Engine safeguard	1
333-3455	Auxilliary contactor	3
500-3572-EDA	Connection block	1
E00353	Contactor complete	2
333-3449	Magnet switch	3
333-3462.UNI	Transformer	1
E00356	Emergency stop	1
E00357	Terminal contact	1
333-3568.1	Impression button (green)	3
333-3569.1	Impression button (red)	3
333-3496	Signal light complete (green)	3
E00360	Signal light red	1
333-3454	Signal light complete (white)	1
333-3201	Relay socket 8pins	1
333-3202	Auxilliary relay	1
333-3203	Connector	1
E00363	Connector 63 A	1
333-3572	Fase guard	1
333-3570	Voltage guard	1

BOM EBE 600S Blasthead UNI panel 600-9110-S

Partno.	Description	Quantity
000133	Main switch	1
333-3462.UNI	Transformer	1
E00350	Circuit breaker (automatic)	1
E00352	Circuit breaker (automatic)	1
333-3448	Engine safeguard	2
333-3477	Engine safeguard	1
333-3449	Magnet switch	2
E00483	Motor Protection switch	1
E00484	Contactora	2
E00485	Contactora	1
333-3481	Time relais	1
E00486	Current tranformer	1
E00487	Ampère meter	1
333-3493-H	Emergency stop button	1
333-3568.1	Impression button (green)	4
333-3569.1	Impression button (red)	4
E00489	Rotary switch	1
333-3454	Signal light complete (white)	1
E00366	Hour counter	1
E00488	Wheatstone bridge	1

BOM Winch panel RIG-9110-H		
Partno.	Description	Quantity
333-3205	Engine safety switch	1
333-3206	Engine safety switch	1
333-3207	Engine safety switch	1
333-3208	Auxilliary contact	1
333-3572	Fase guard	1
333-3210	Magnet switch	3
333-3212	Magnet switch	1
333-3209	Relay socket 14pins	3
RIG-3652	Interface relais	3
E00416	Automatic 2-pole	1
333-3214	Trafo pr 230-440/sec 24DC 5A	1
333-3221	Main switch 32A 3P compl.	1
333-3568.1	Impression button (green)	2
E00360	Signal light red	1
333-3454	Signal light complete (white)	1
RIG-3360	PCB Board hydr. winch RIG 4012	1
BOM Remote control box complete.		
Partno.	Description	Quantity
RIG-3623-H_1	Remote contr box only RIG 4012	1
RIG-3623-H_2	Push button up RIG 4012	1
RIG-3623-H_3	Push button down RIG 4012	1
RIG-3623-H_4	Push button right RIG 4012	1
RIG-3623-H_5	Push button left RIG 4012	1
RIG-3623-H_6	Auto mode switch RIG 4012	1
RIG-3623-H_7	Start push button RIG 4012	1
RIG-3623-H_8	Emergency button RIG 4012	1
454795	Potentio meter 10K	1