


# EBE panels period 1995-2000 “Blasthead & Dust Collectors”


Horizontal & Vertical Equipment

# Photo Electro Boxen


- 350 S ( 1 of 2 )
- 350 E ( 1 of 5 )
- 350 VH ( 1 of 4 )
- 500 SE ( 1 of 3 )
- 500 VH ( 1 of 3 )
- 350 Dust arrestors ( 1 of 6 )
- 500 Dust arrestors ( 1 of 4 )

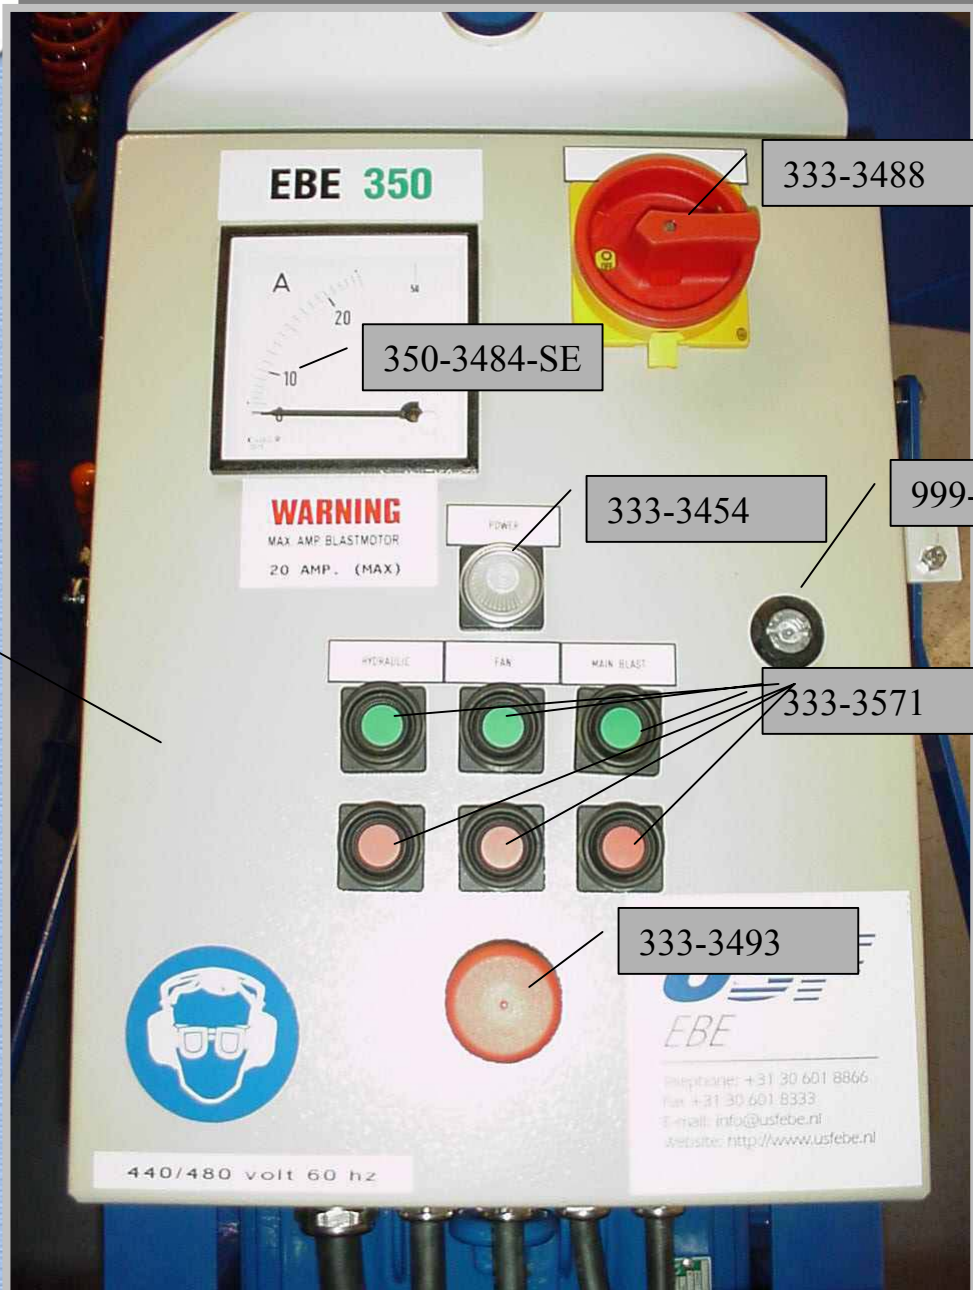

350-9110-S Electro box complete (E)

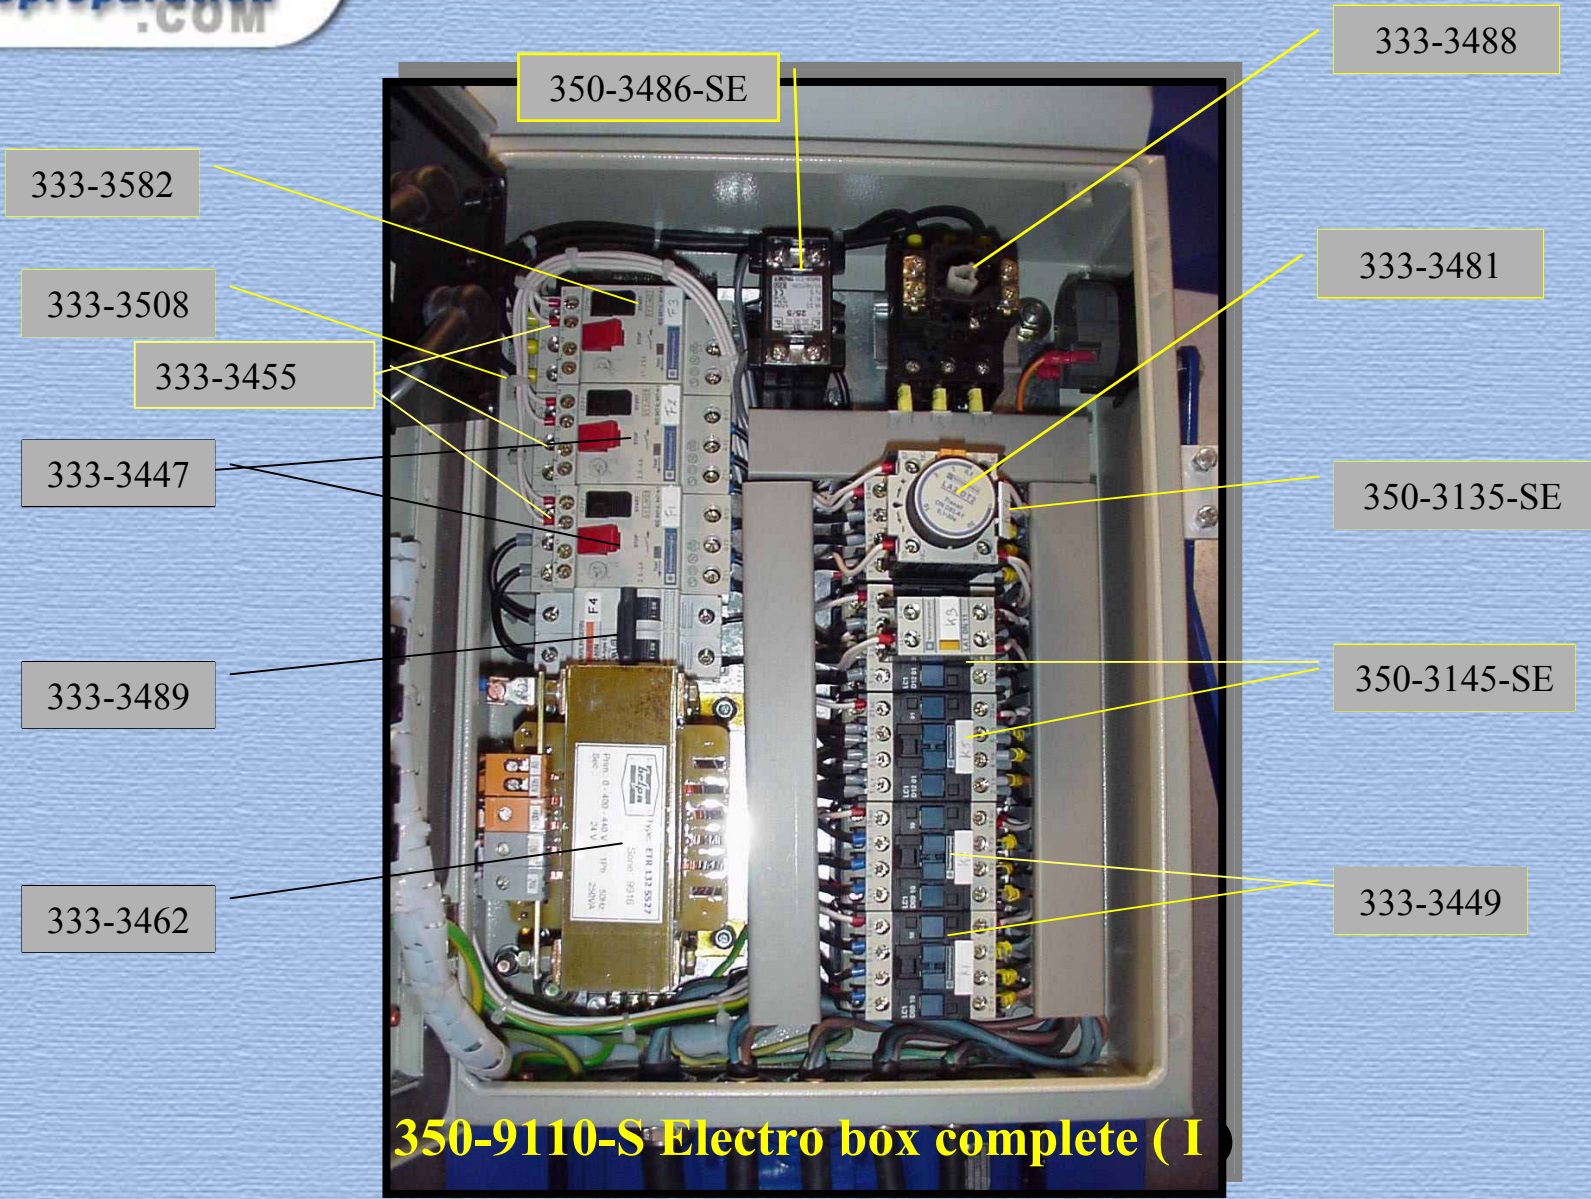

**350-9110-S Electro box complete ( I )**

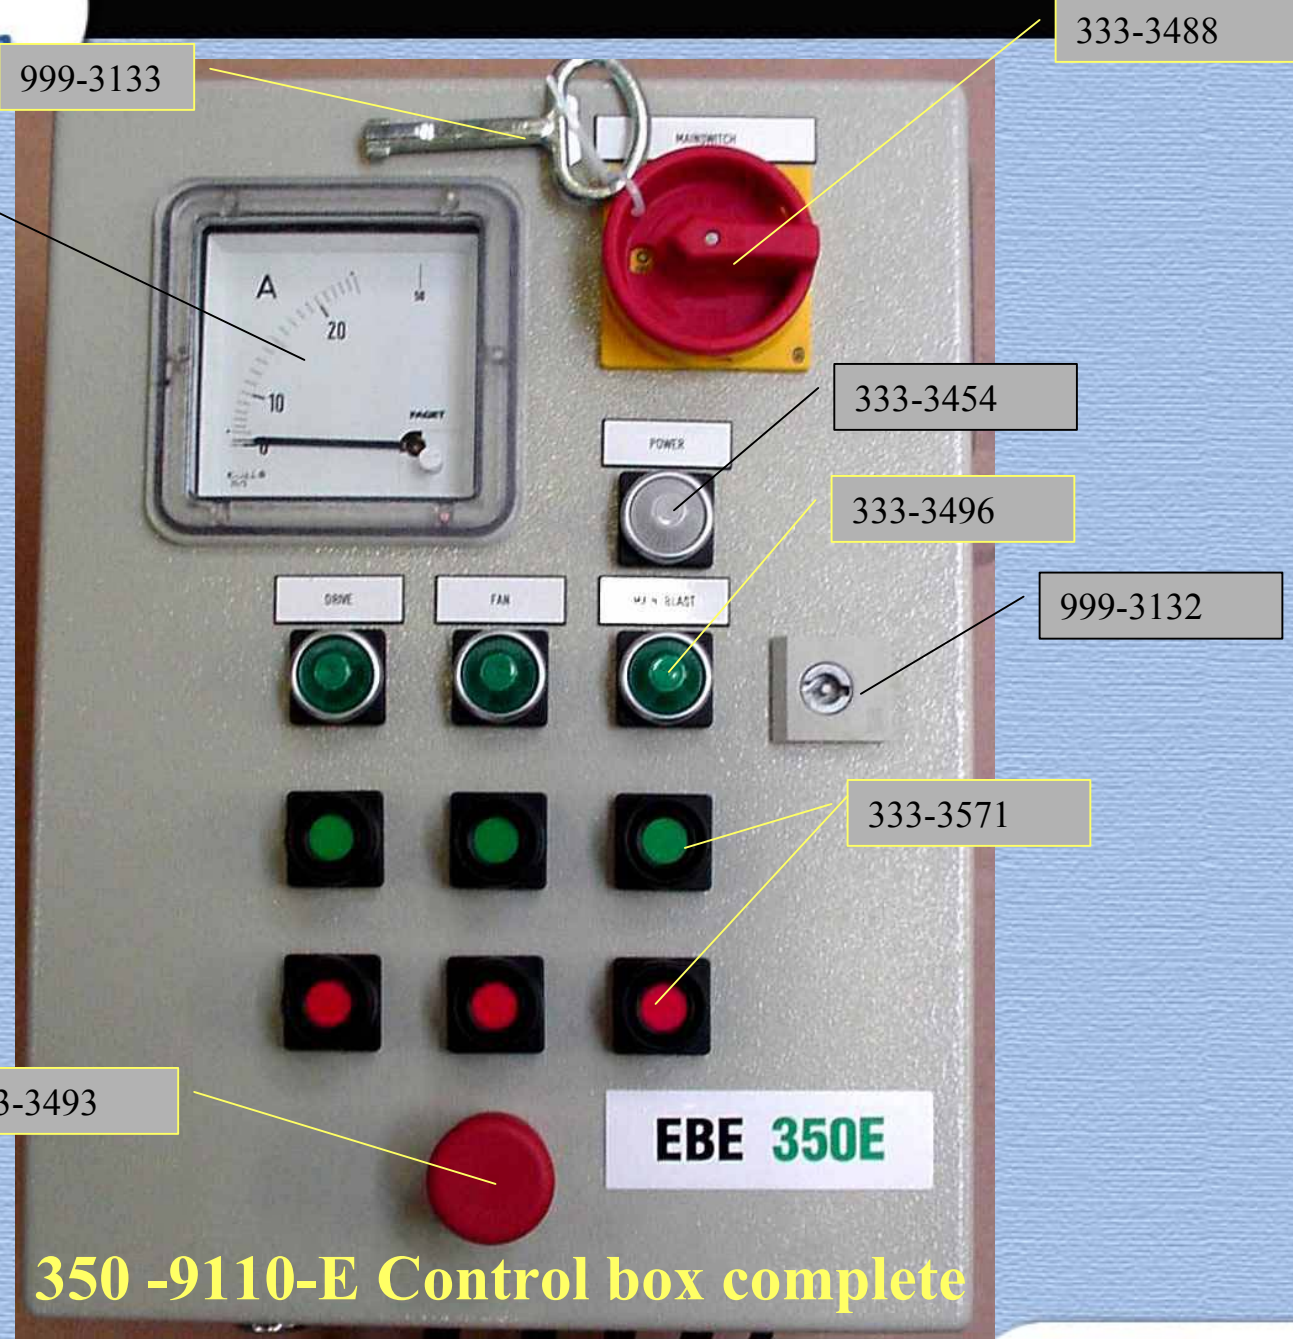

350-3484-SE

999-3133

333-3488

333-3454


333-3496

999-3132

333-3571

333-3493

**350 -9110-E Control box complete**

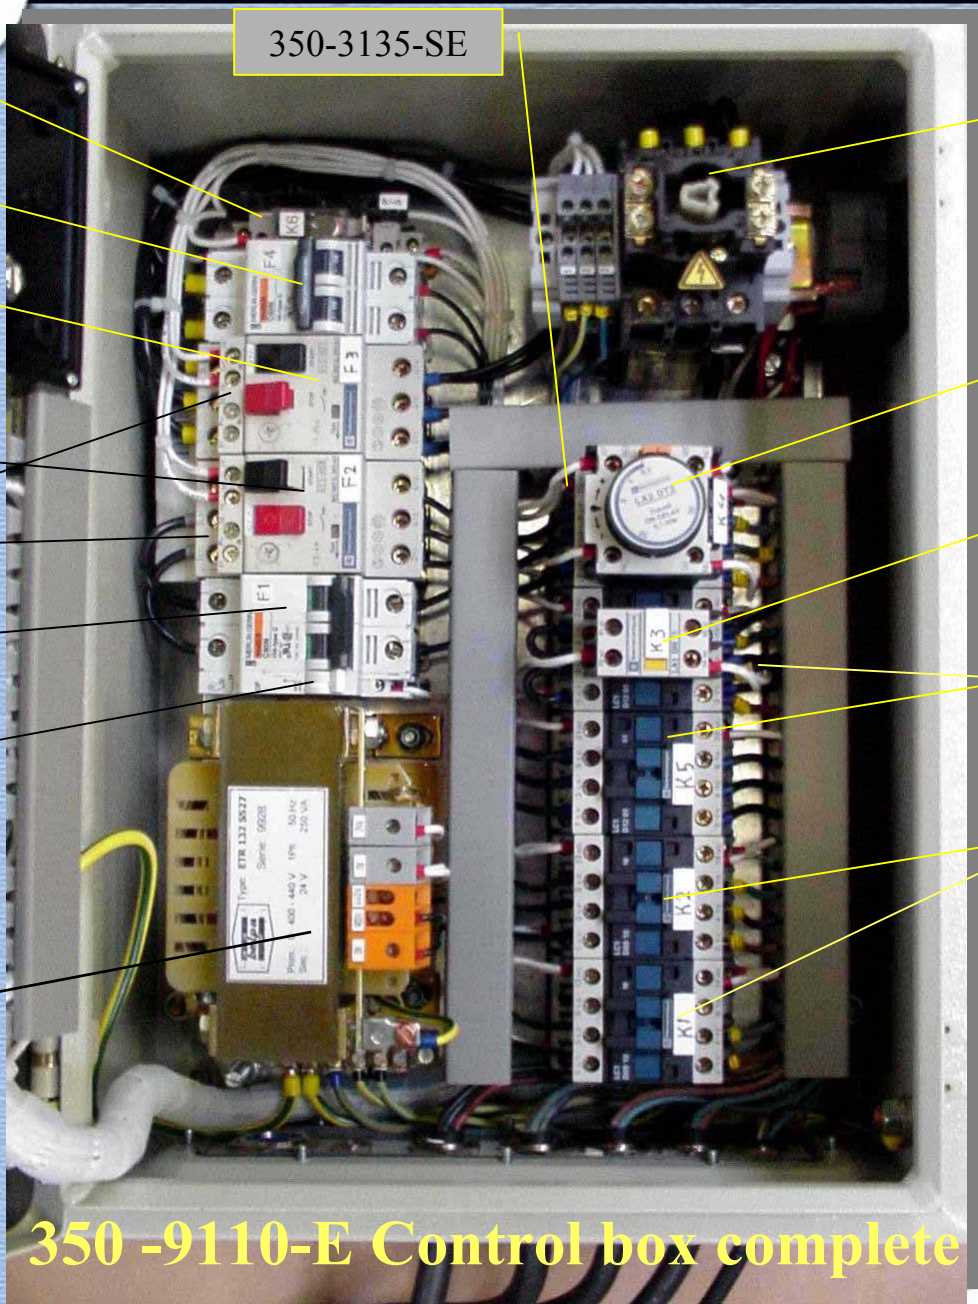

333-3518

350-3135-SE

350-3486-SE

333-3489

333-3582

333-3481

333-3447

333-3455

333-3482

333-3490

350-3145-SE

350-3455-E

333-3449

333-3462


350 -9110-E Control box complete

350-3428-E


350-3429-E

500-3427-E

500-3426-E

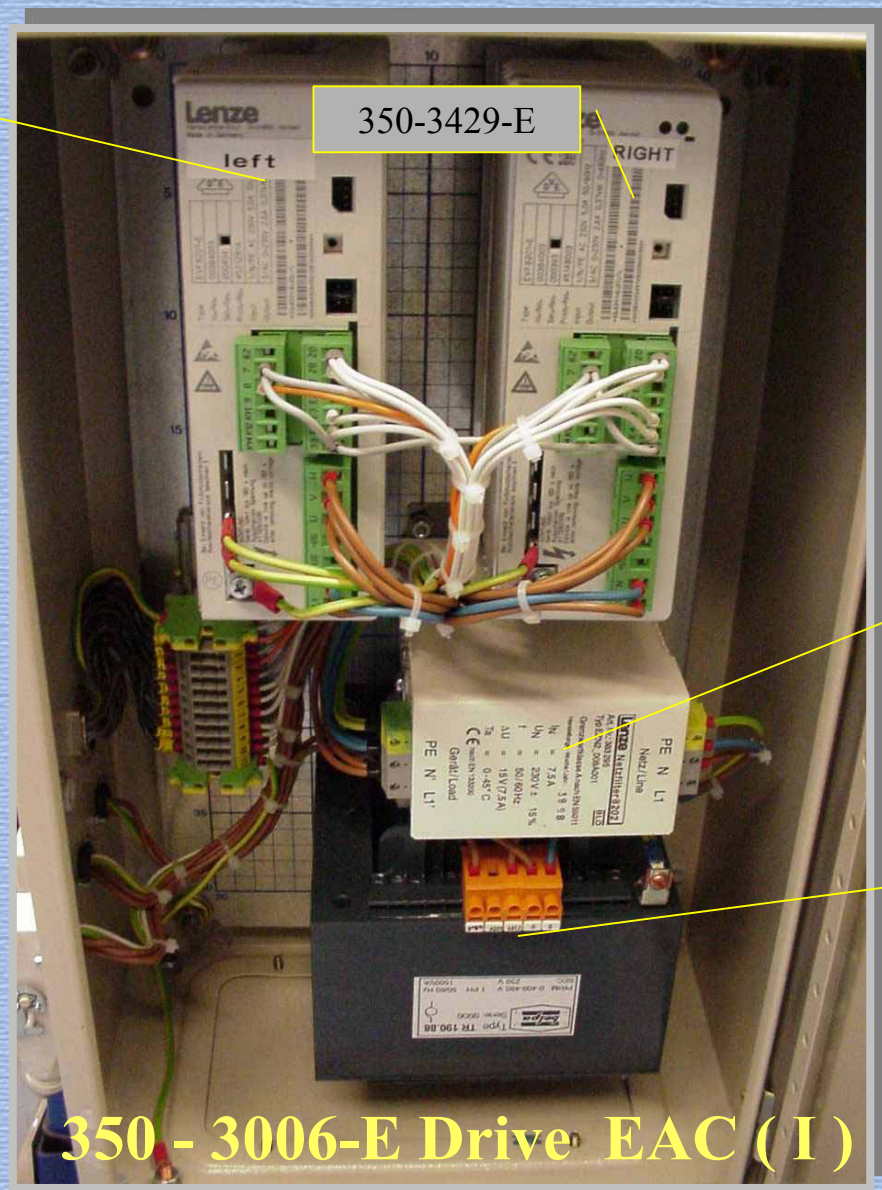

**350 - 3006-E Drive EAC (I)**

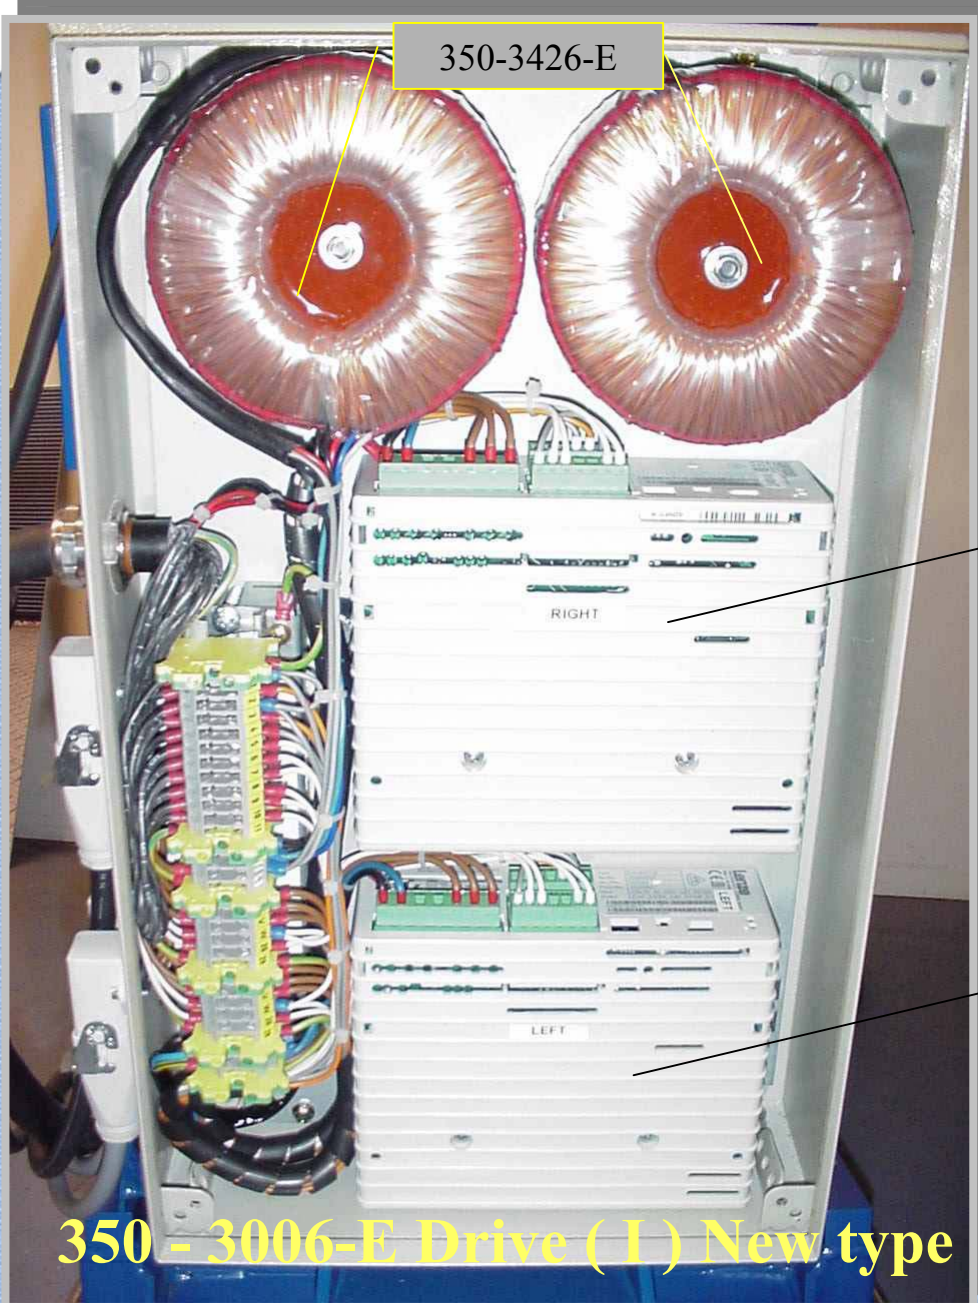


350-3426-E

350-3429-E

350-3428-E

350 - 3006-E Drive (I) New type



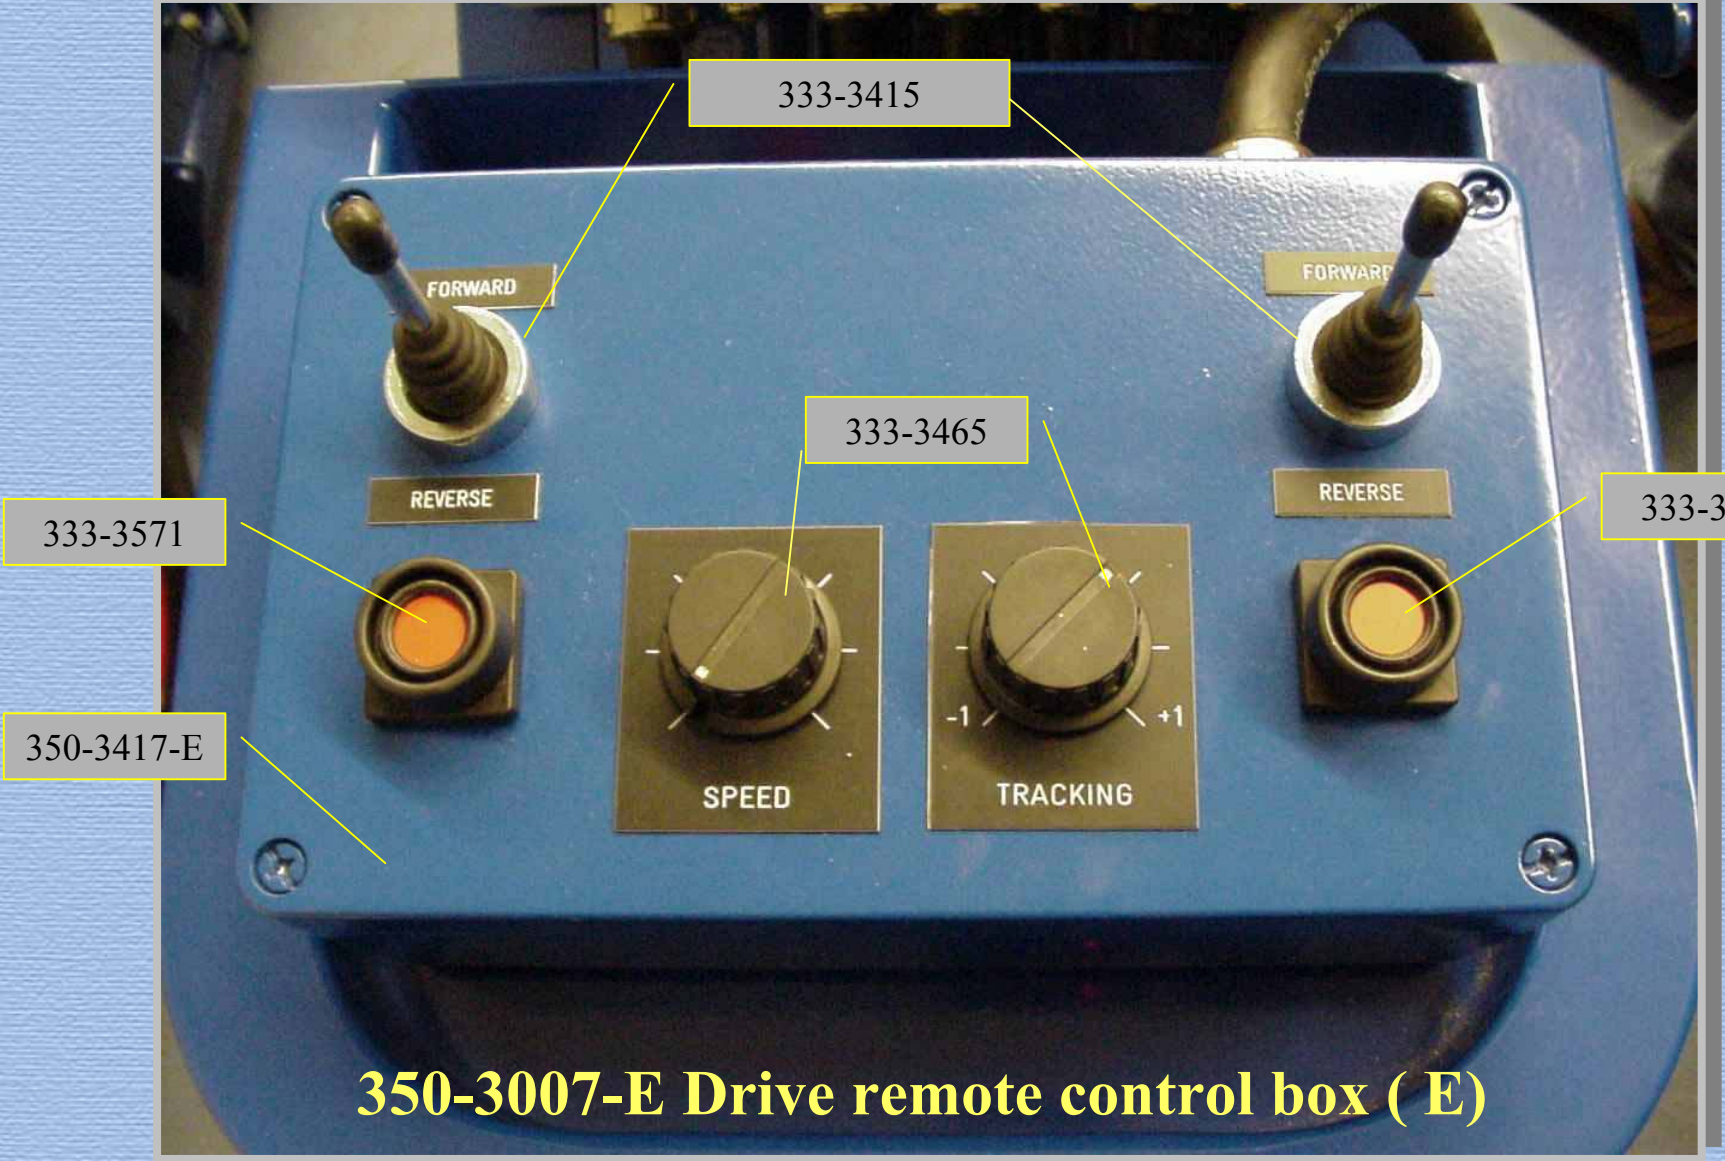

**350-3007-E Drive remote control box ( E )**



333-3571

333-3454

333-3496


333-3497

333-3488

999-3132

350-3473-VH

**350-9110-VH Electro box complete (E)**

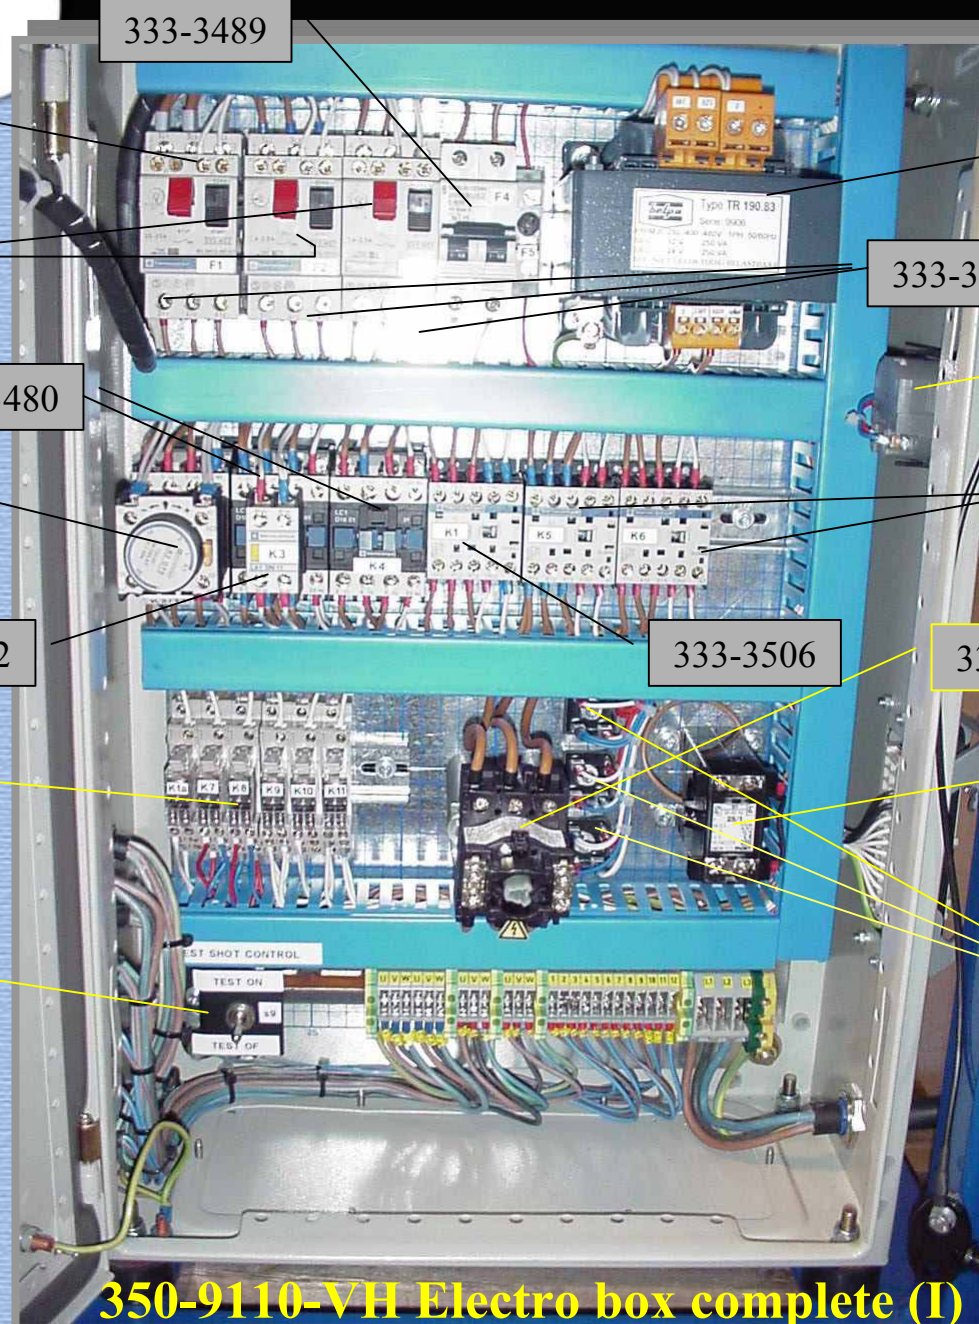

333-3476

333-3489

333-3458

333-3475

333-3455

333-3480

333-3487

333-3481

333-3478

333-3482

333-3506

333-3488

333-3503  
+  
333-3504

350-3486-VH

333-3441

333-3508

**350-9110-VH Electro box complete (I)**

350-3484-VH


333-3483

333-3571

999-3132

333-3493

350-3340-VH

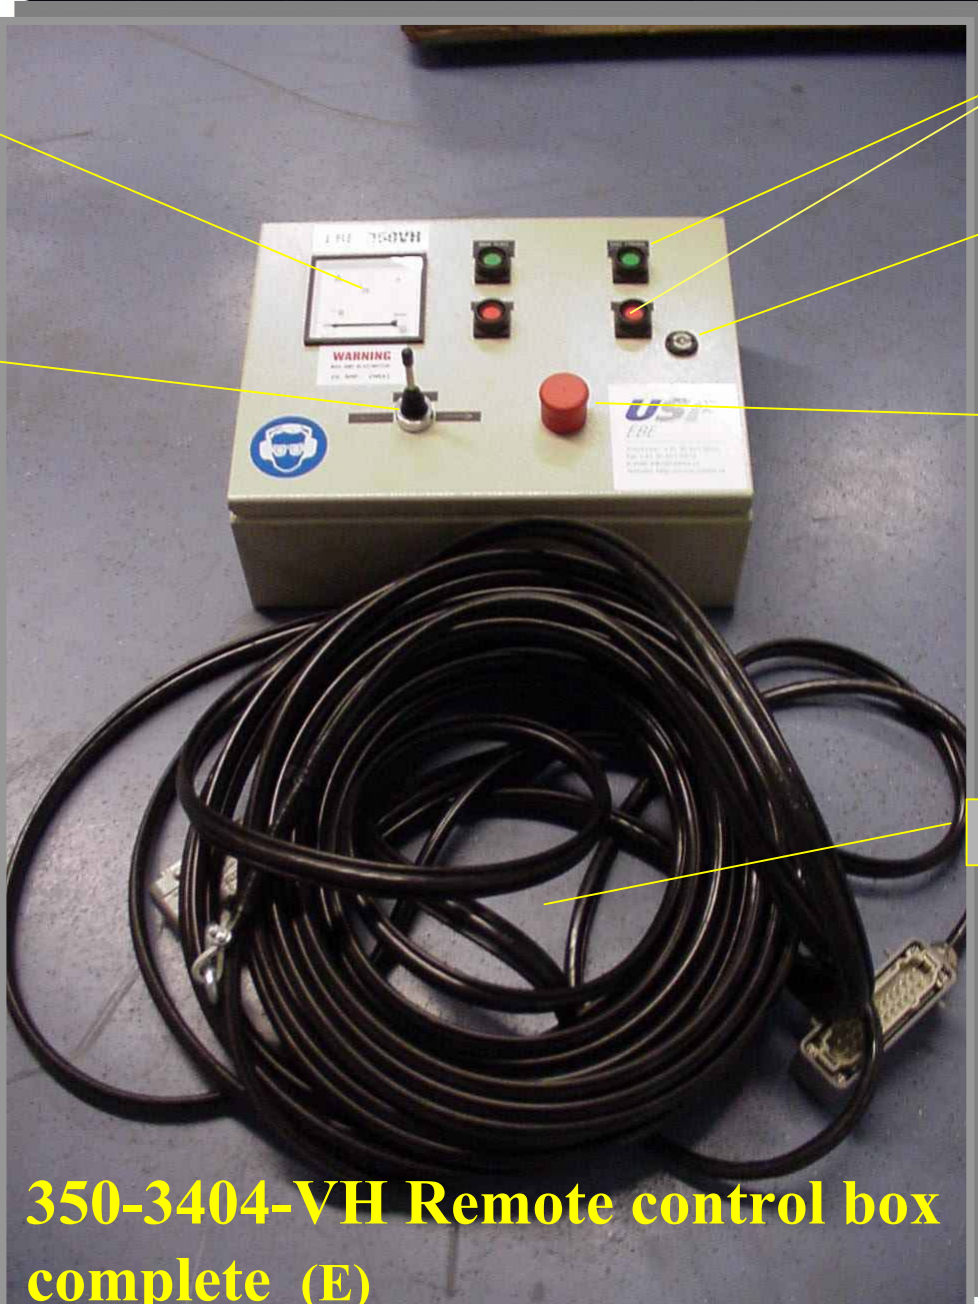

**350-3404-VH Remote control box complete (E)**

999-3132

333-3457


333-3483

333-3456  
+  
333-3457

333-3456

333-3457

350-3848-VH

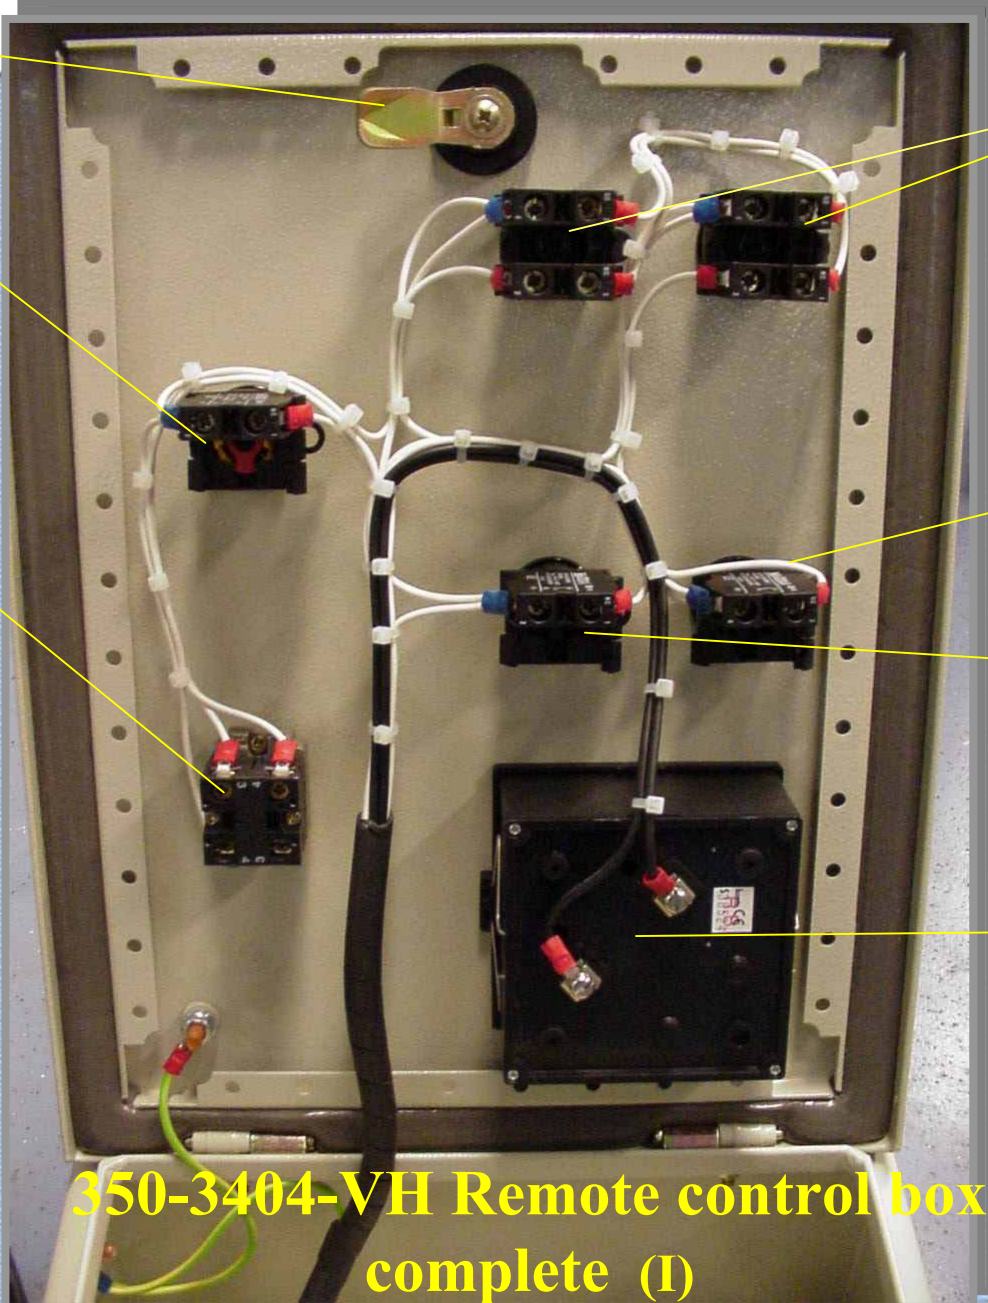

**350-3404-VH Remote control box complete (I)**

333-3454

500-3381-SE

333-3493


333-3457

999-3132


500-3383-SE

333-3571

500-3384

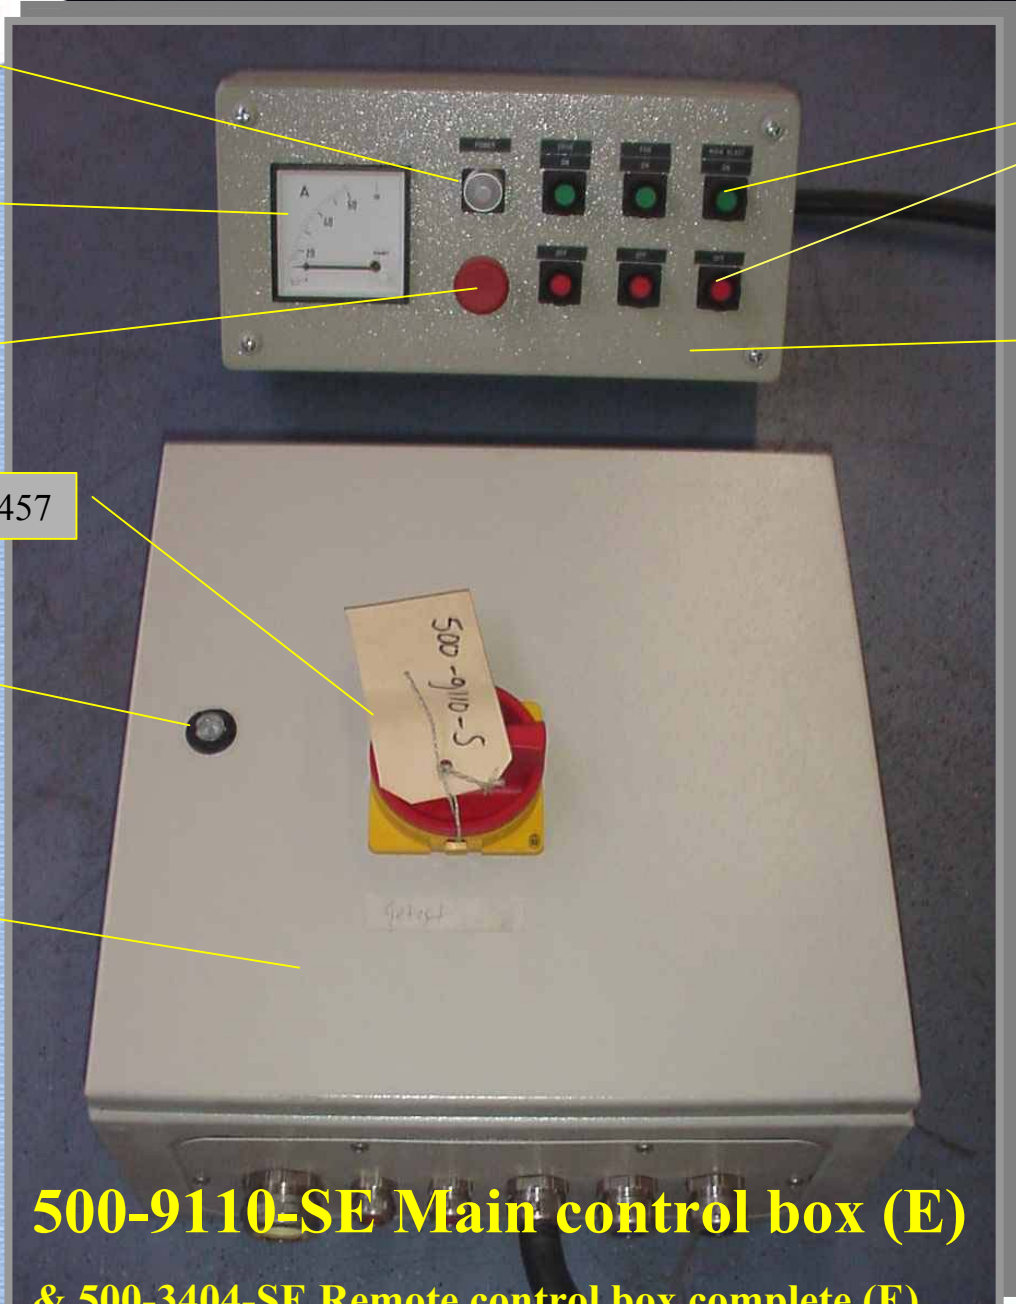

**500-9110-SE Main control box (E)**  
**& 500-3404-SE Remote control box complete (E)**

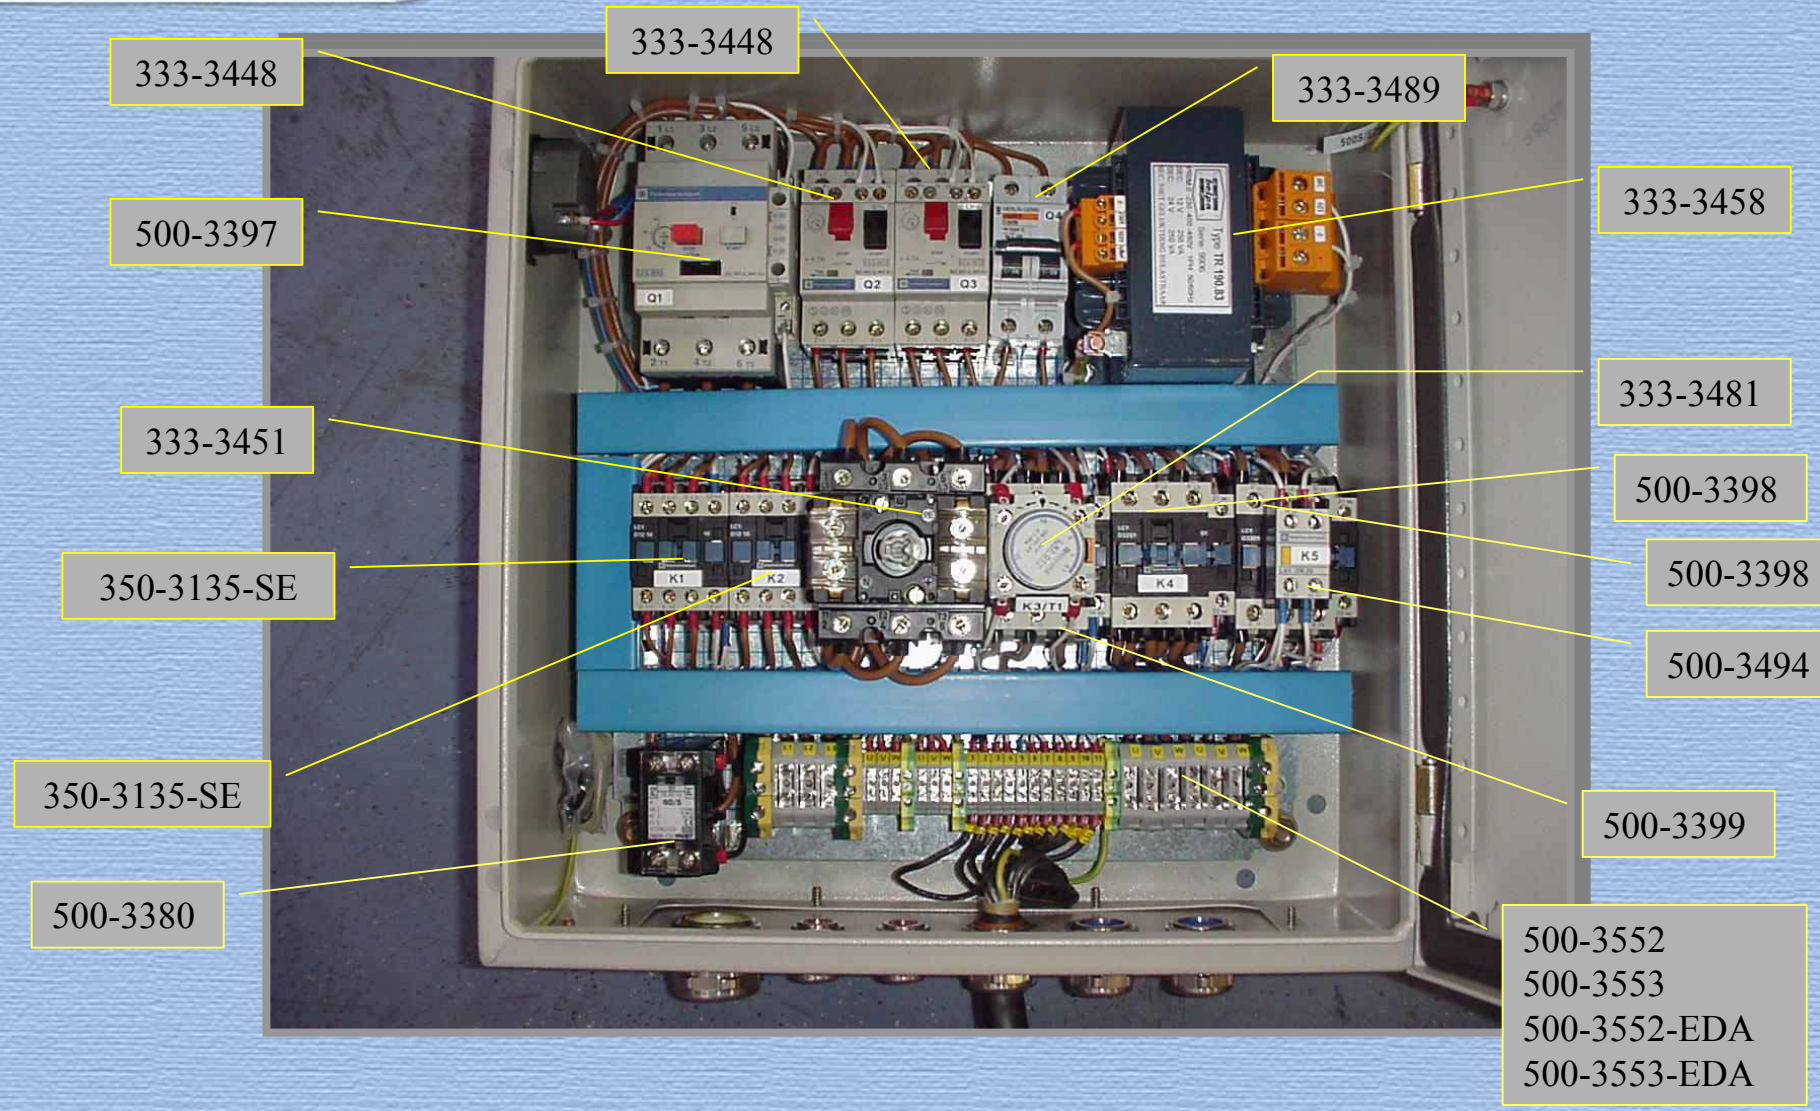

## 500-9110-SE Main control box (I)


333-3454

500-3381-SE

500-3384


333-3571

333-3493

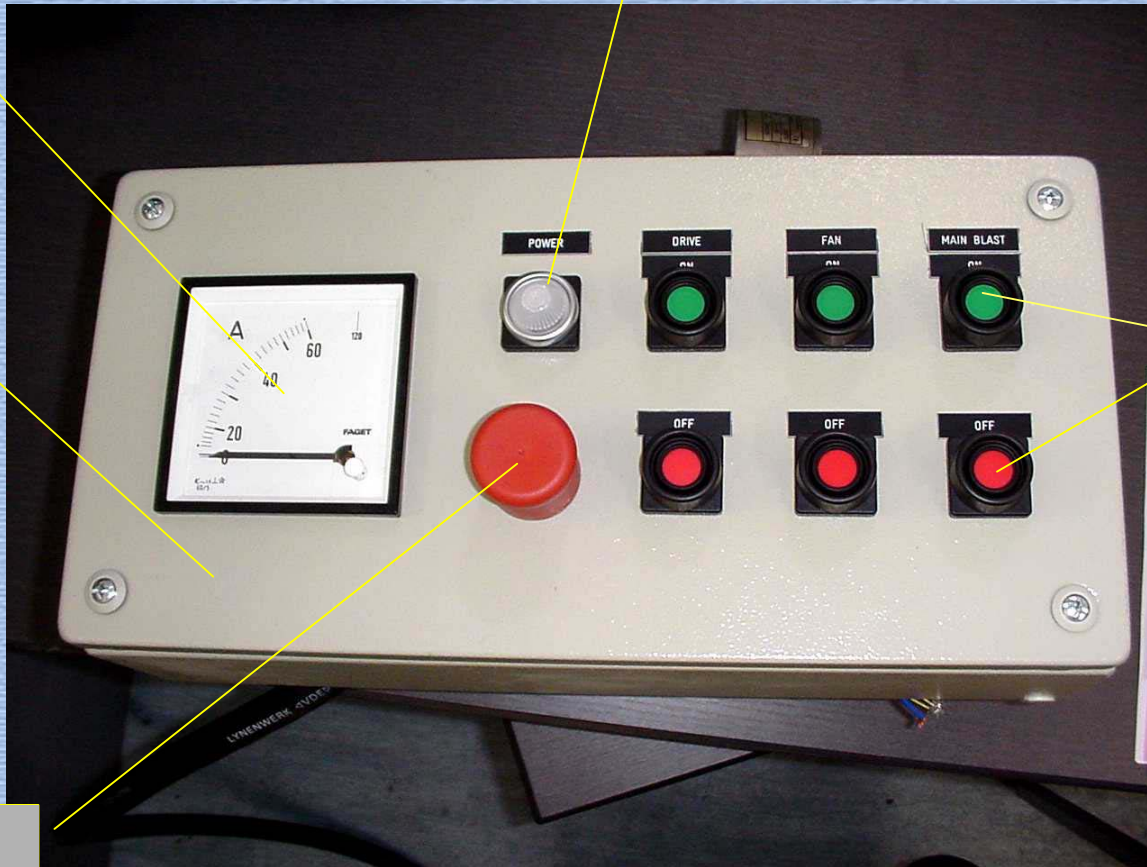

500 SE Remote control box (E)



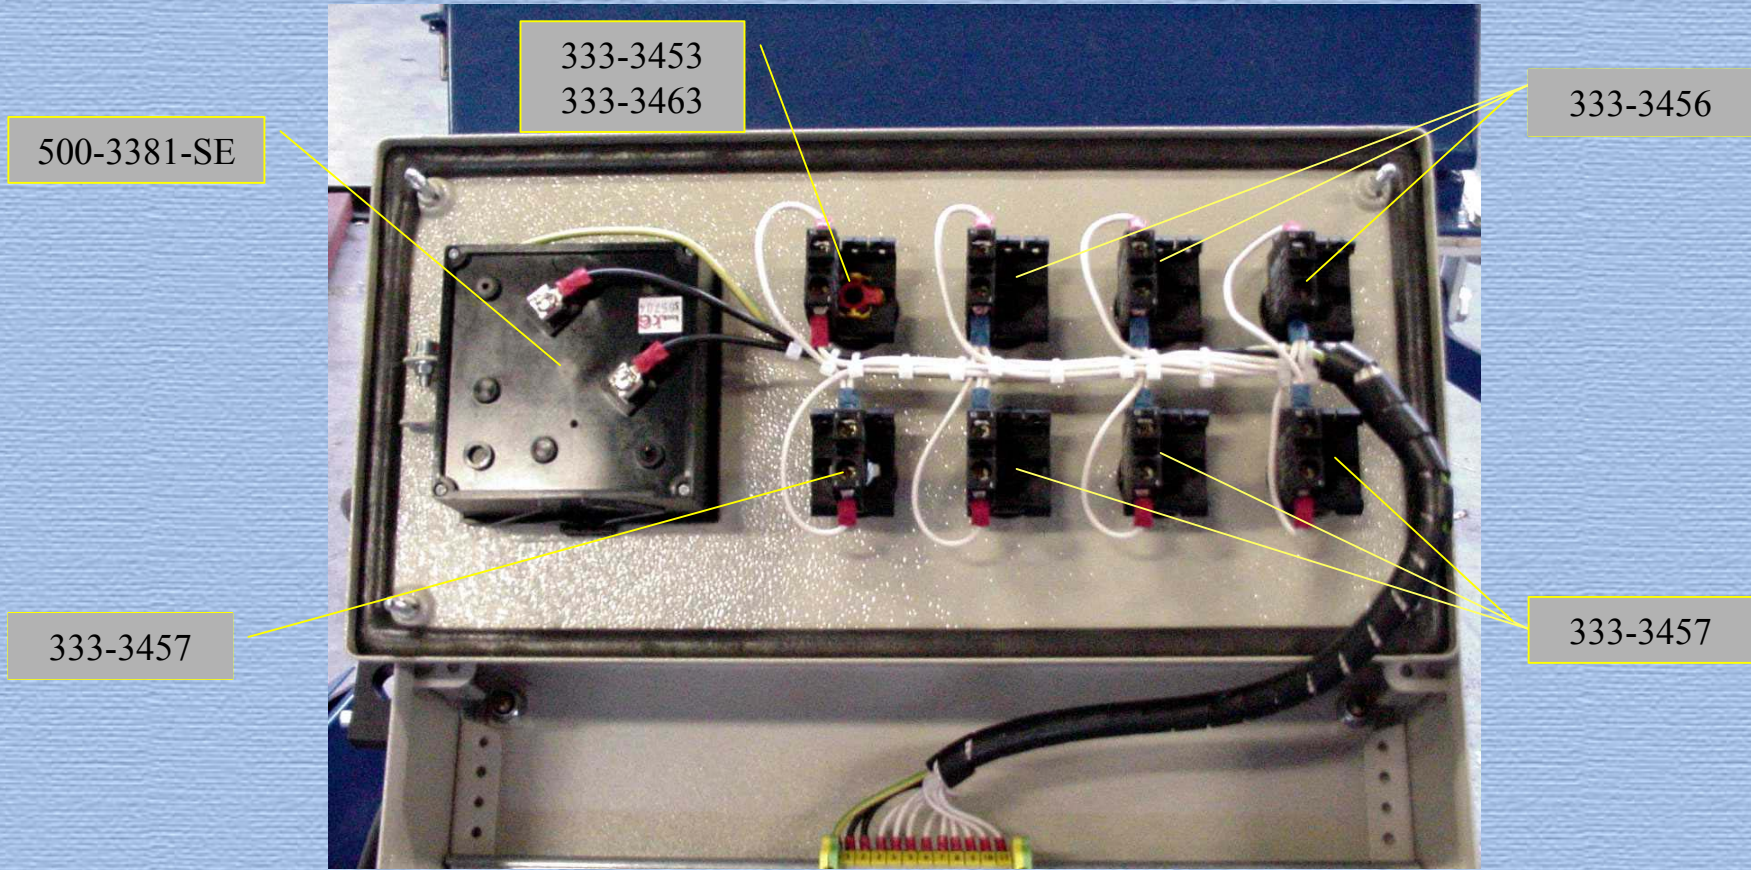

Remote control box 500E

333-3420  
333-3421  
333-3422  
333-3423

333-3418  
333-3419  
333-3422  
333-3423


333-3415

333-3465

500-3417-E


333-3571

500-3430-E

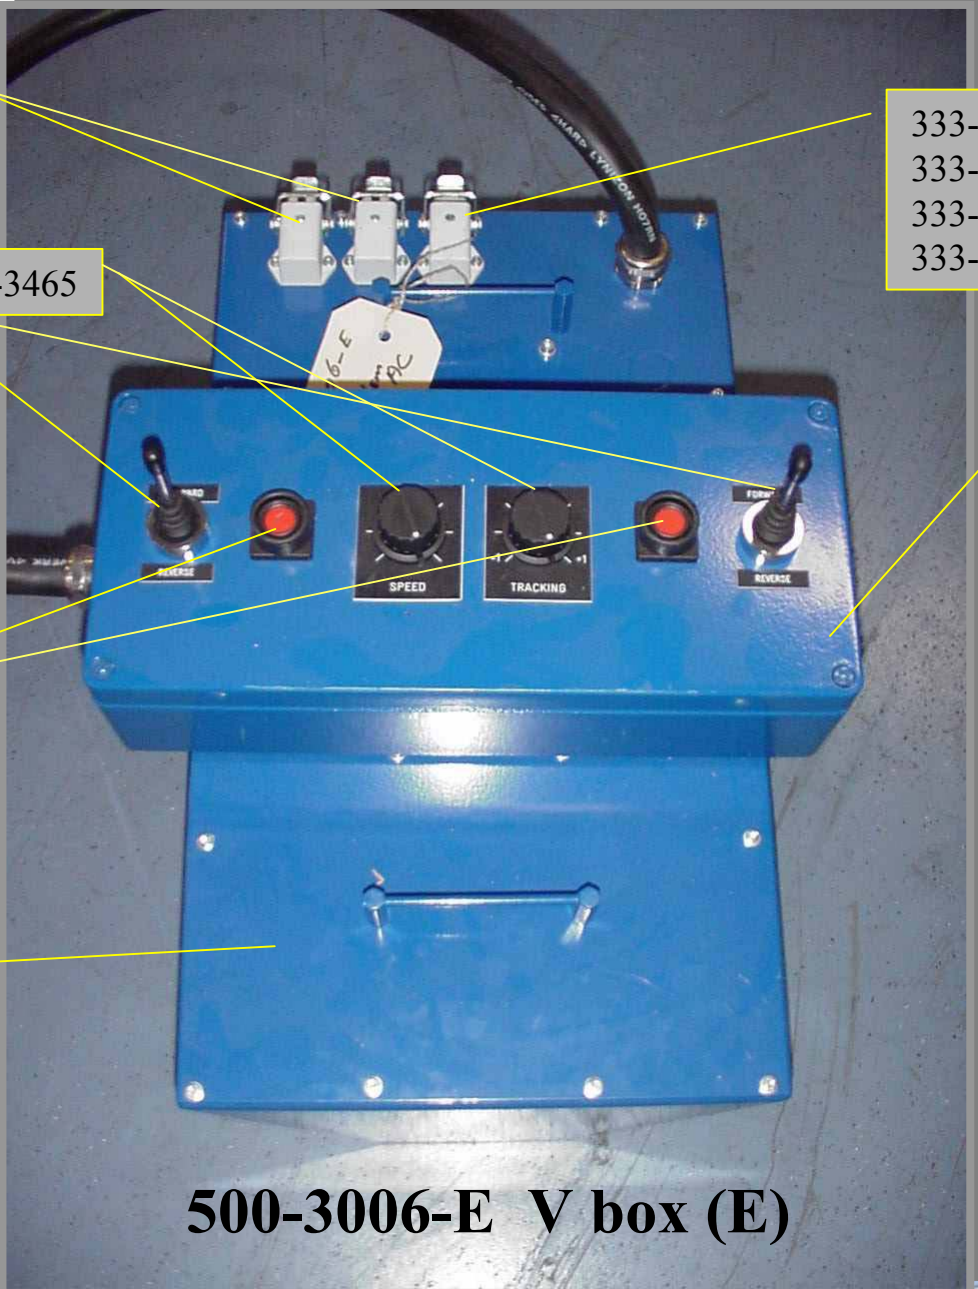


**500-3006-E V box (E)**

333-3420  
333-3421  
333-3422  
333-3423

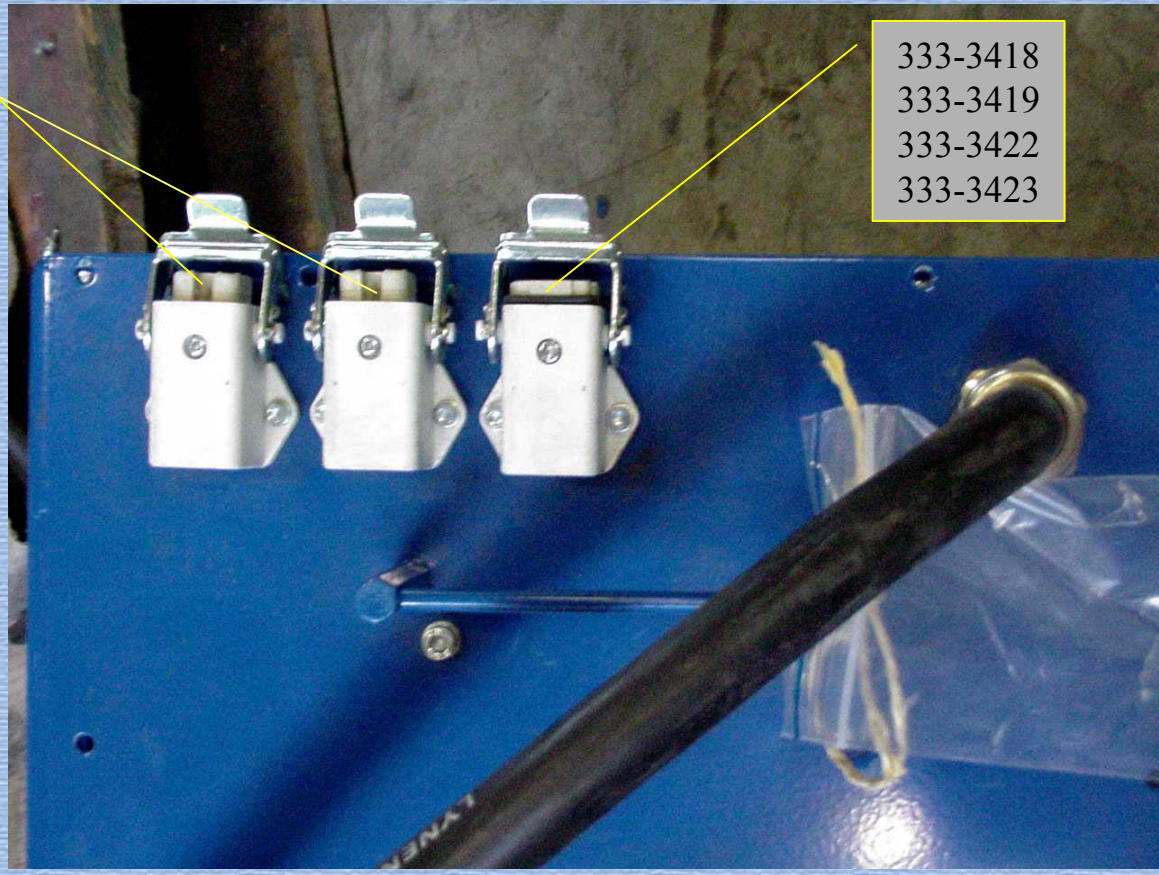

333-3418  
333-3419  
333-3422  
333-3423

500 E. V-box external

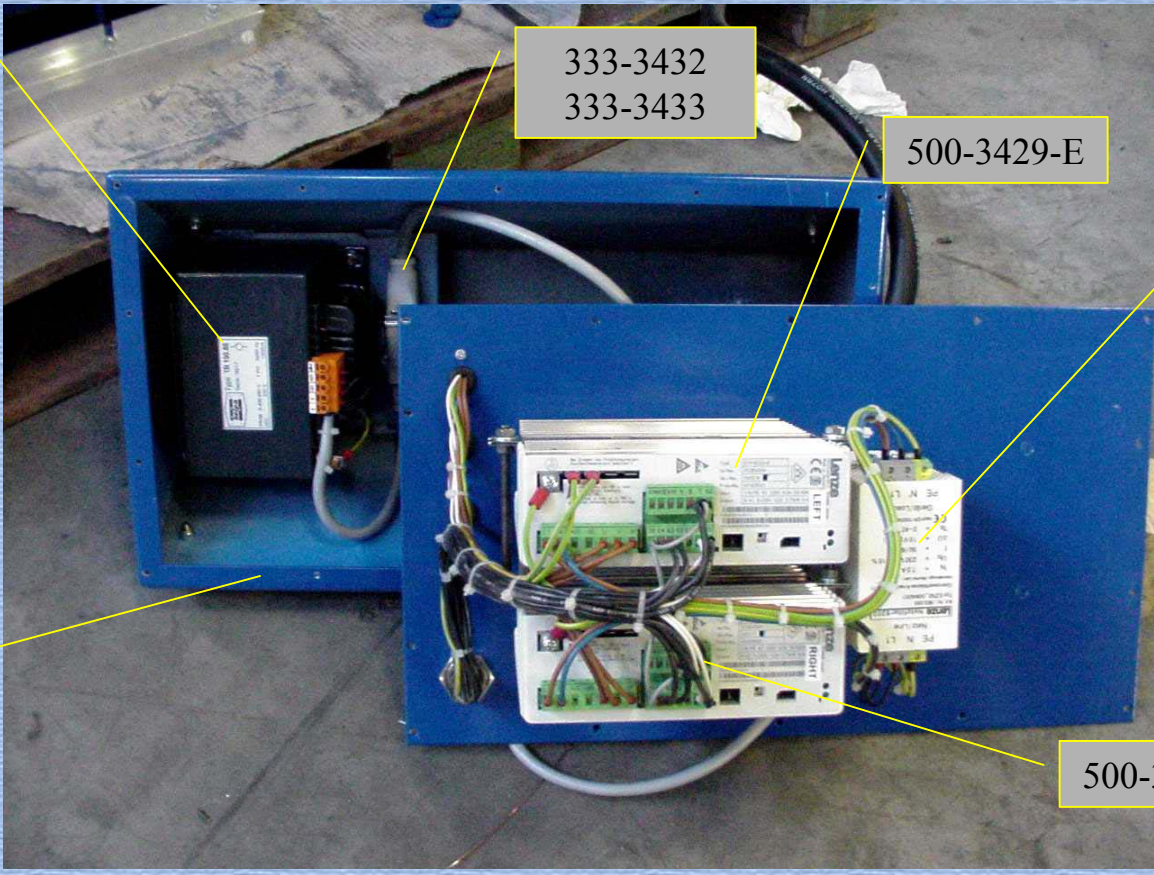

500-3426-E

333-3432  
333-3433

500-3429-E

500-3427-E

500-3430-E

500-3428-E

500 E V-box internal

500-3190-E

500-3185-E


333-3457

500-3417-E

333-3415

333-3415

333-3457

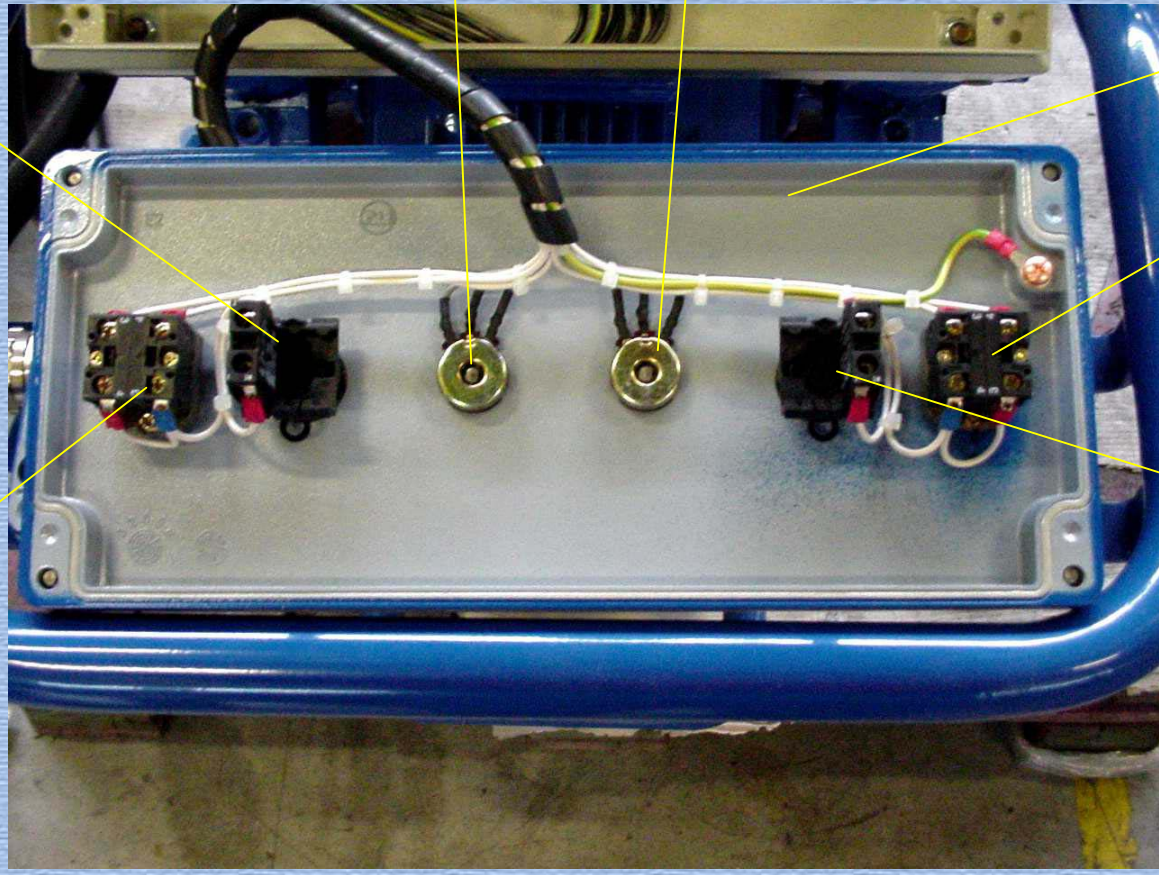

Remote control box internal 500 E drive



333-3571

999-3132

500-3473-VH

333-3451

**500-9110-VH Electro box complete (E)**

500-3400

333-3460

500-3141-VH

333-3330  
333-3331

333-3503  
333-3504

333-3453

999-3326

999-3325

999-3327

999-3331

999-3332

999-3334

999-3329

333-3326

500-3387

500-3486-VH

333-3487

333-3508

333-3328

333-3458

333-3503  
333-3504

333-3451

**500-9110-VH Electro box complete (1)**

333-3500  
333-3501  
333-3502  
333-3499-VH

500-3230-V

333-3571

999-3132

333-3493

333-3329


333-3483

350-3474-VH



**500-3404-VH Remote control box complete**



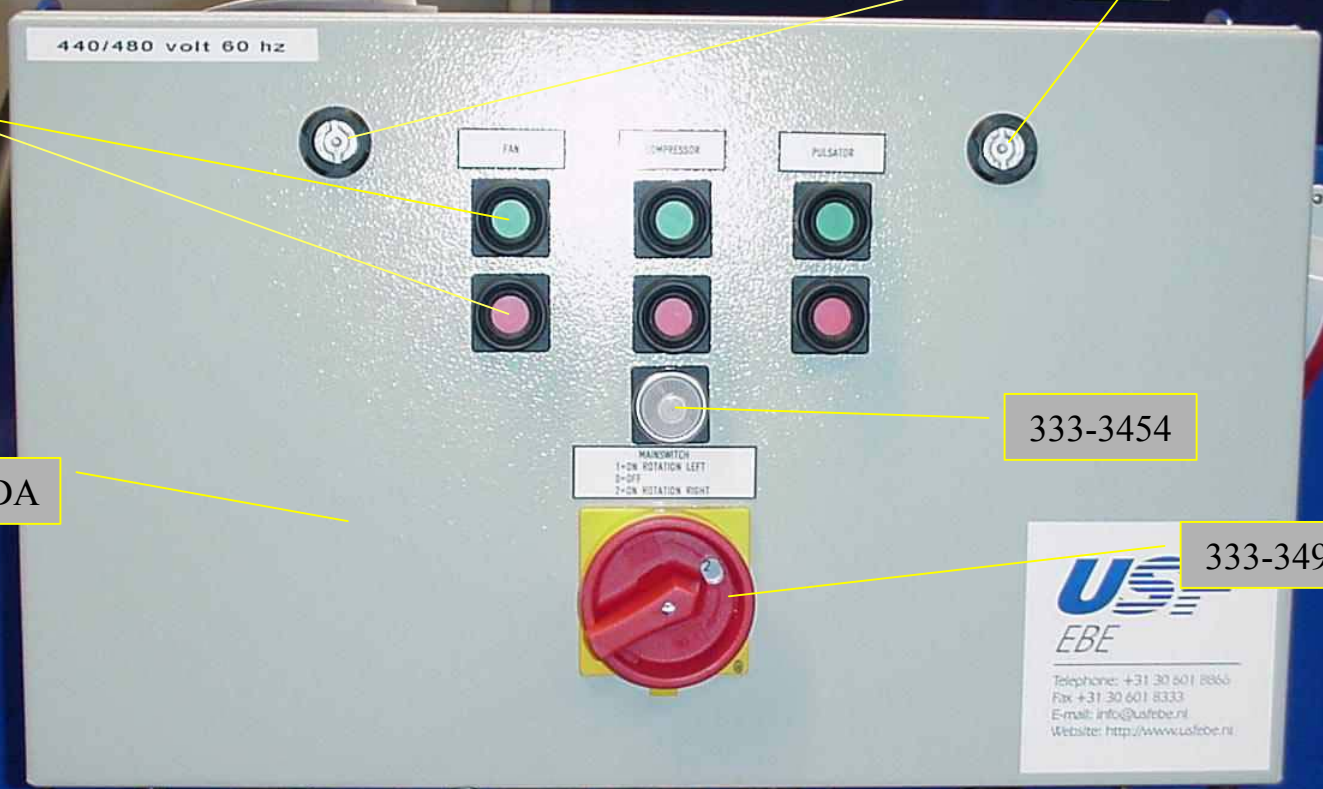

333-3571

999-3132

333-3450


350-3443-VHDA


333-3454

333-3494

**350-9110-SDA Electro box complete ( E )**



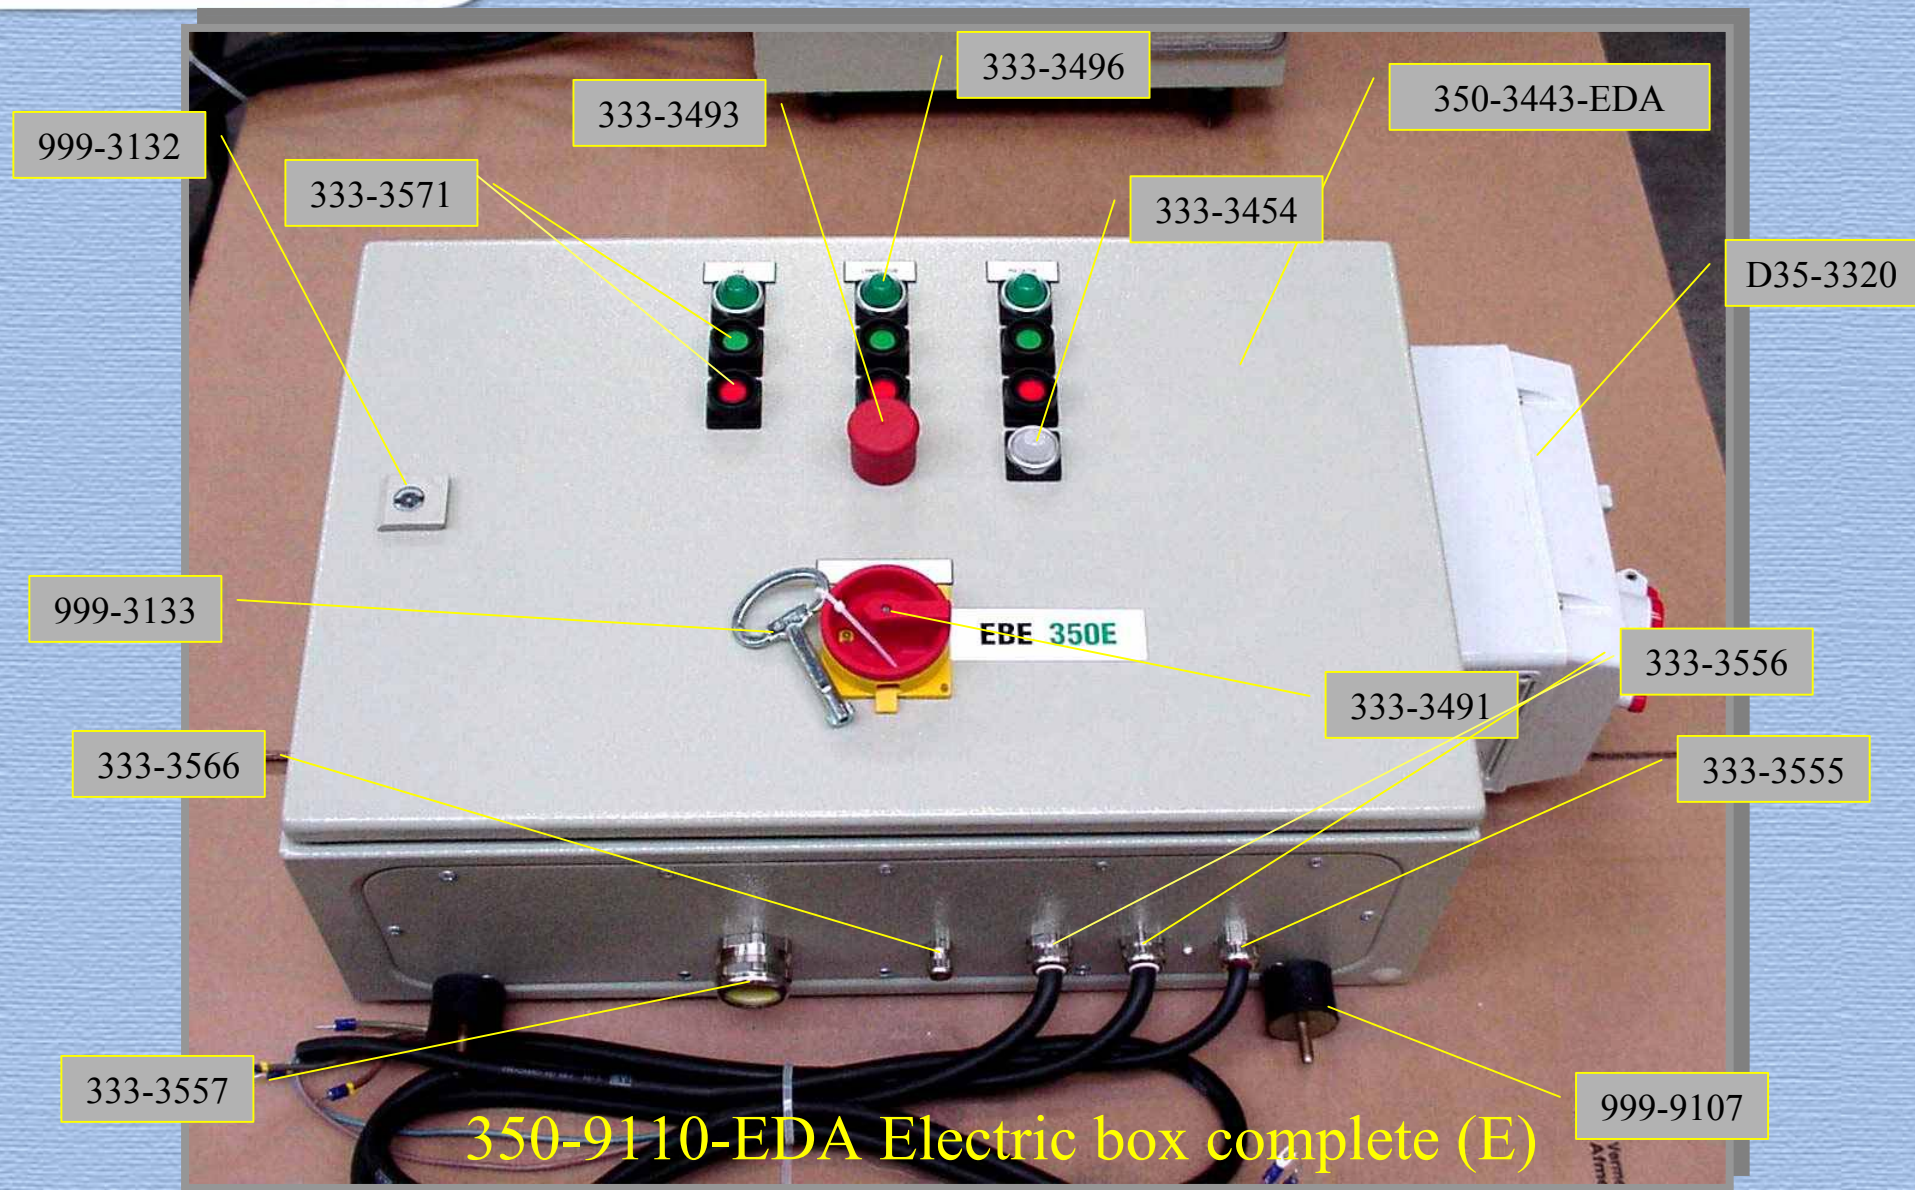

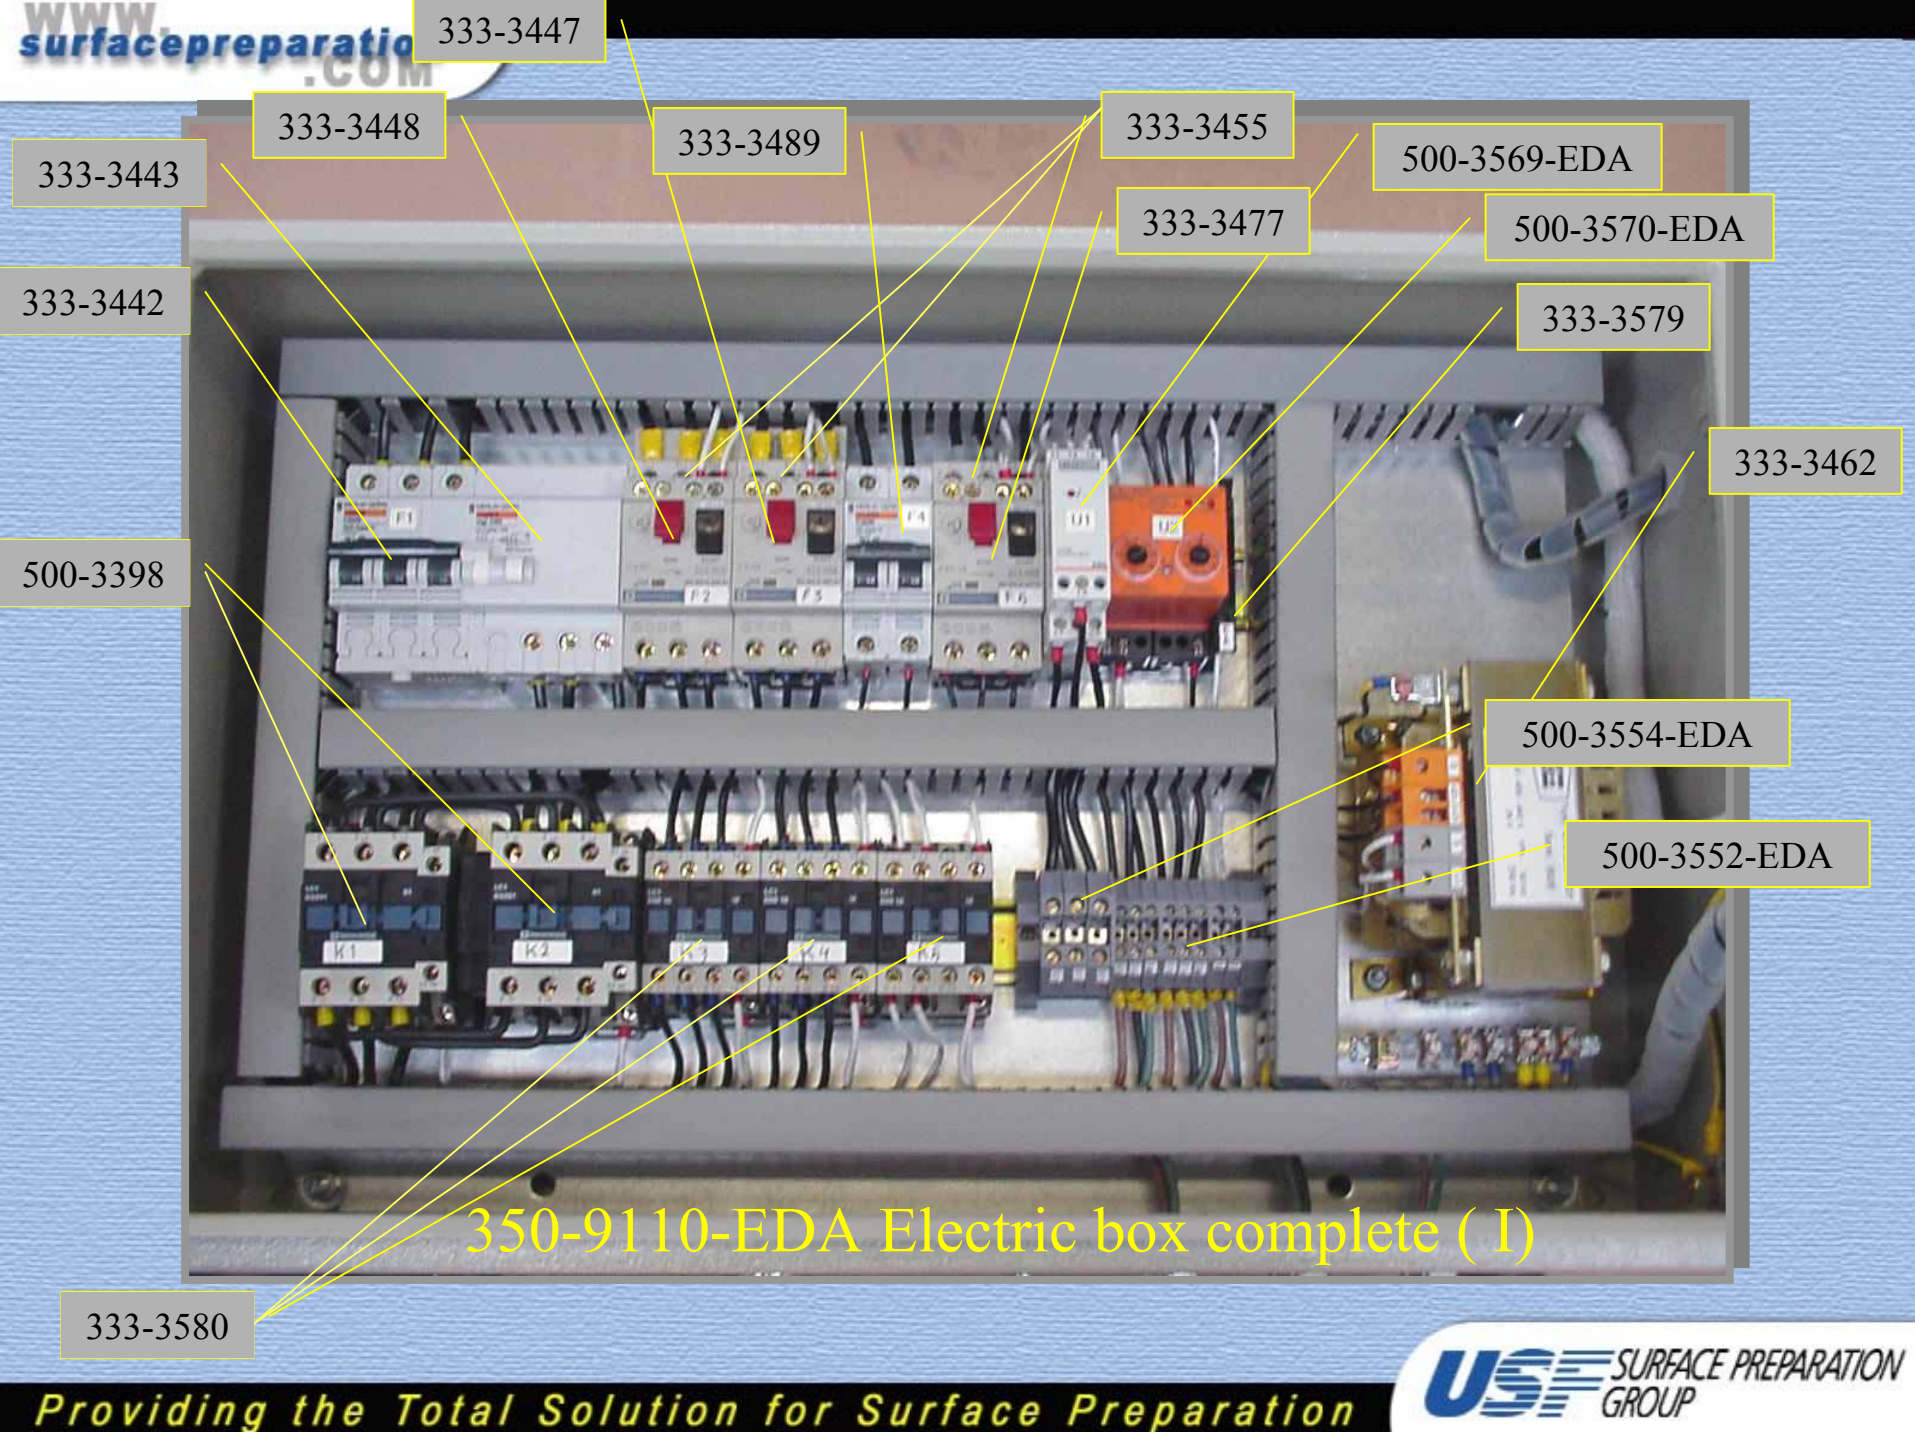

333-3447

333-3448

333-3489

333-3455

500-3569-EDA

333-3443

333-3477

500-3570-EDA

333-3442

333-3579

500-3398

333-3462

500-3554-EDA

500-3552-EDA

350-9110-EDA Electric box complete (I)

333-3580



999-3132

333-3451

333-3454

999-3132

333-3571

333-3450

350-3443-VHDA

333-3459

### 350-9110-VHDA Electric box complete ( E )

333-3557

333-3555



350-9110-VHDA Electric box complete (I)

999-3132

333-3454

999-3132

333-3525

500-3443-VHDA

333-3571

500-3200-SHEV


333-3451

500-9110-SVHDA Electro box complete (E)



**US**  
**EBE**

Telephone: +31 30 601 8066  
Fax +31 30 601 8333  
E-mail: info@usfbe.nl  
Website: http://www.usfbe.nl

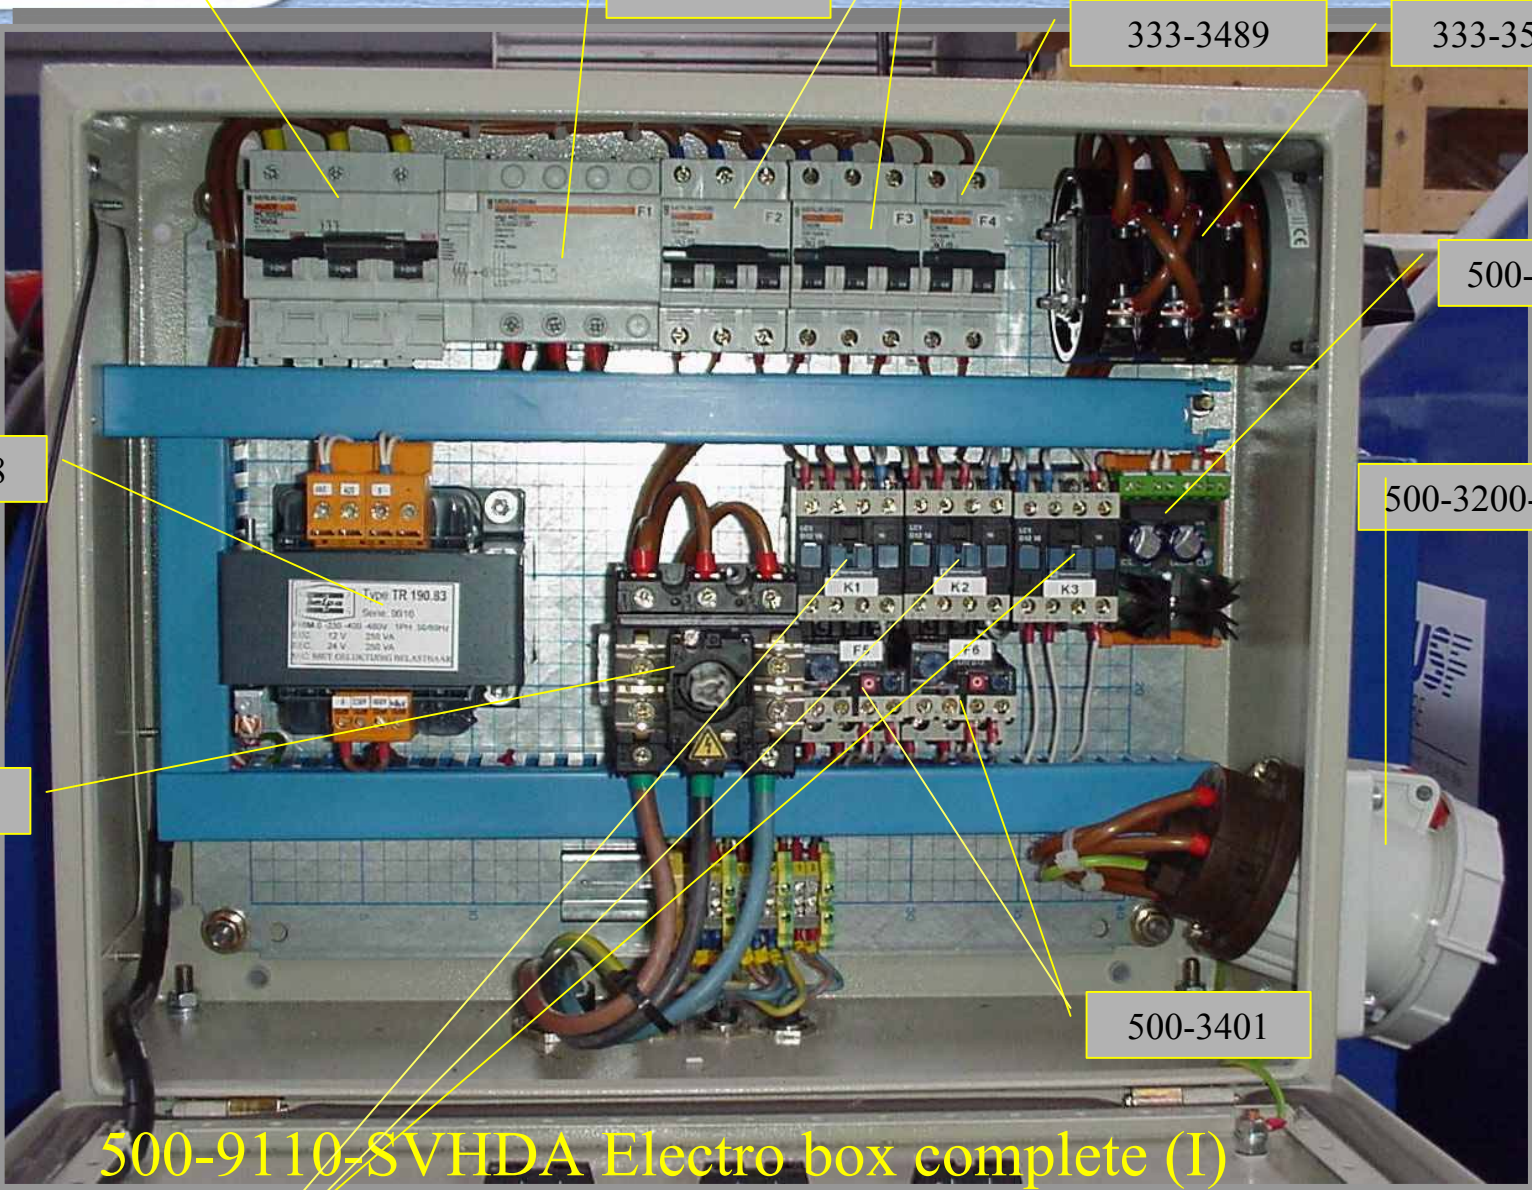

333-3526

333-3527

500-3400

333-3489

333-3525

500-3568-EDA

333-3458

500-3200-SHEV

333-3451

500-3401

500-9110-SVHDA Electro box complete (I)

350-3135-SE




500-3536-EDA

333-3496

333-3495

999-3132

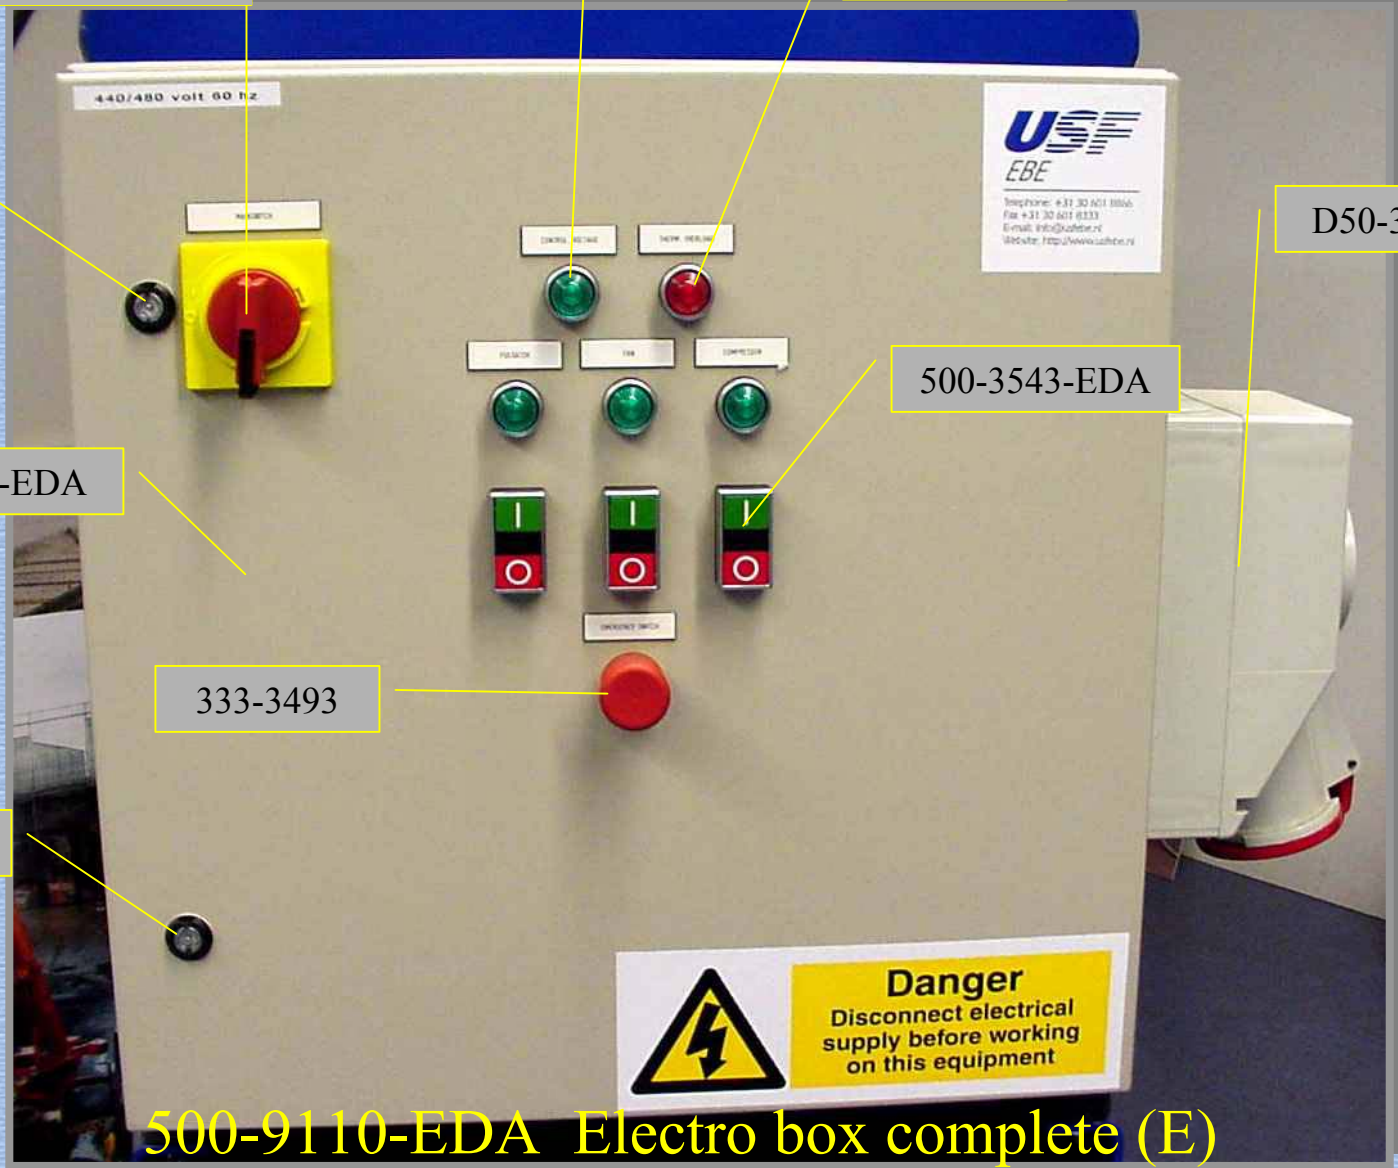

D50-3320

500-3519-EDA

500-3543-EDA

333-3493

999-3132

**Danger**  
Disconnect electrical supply before working on this equipment

500-9110-EDA Electro box complete (E)

500-3533-EDA

500-3534-EDA

500-3523-EDA

500-3567-EDA

500-3516-EDA  
500-3537-EDA  
500-3538-EDA  
500-3539-EDA

500-3531-EDA

500-3529-EDA

500-3528-EDA

500-3530-EDA

500-3532-EDA

500-3522-EDA

333-3447

500-3552-EDA

500-3553-EDA

500-3568-EDA

500-3566-EDA

500-3455-EDA

500-3569-EDA

500-3570-EDA

500-3455-EDA

500-3535-EDA

500-9110-EDA Electro box complete (I)