



OPERATION

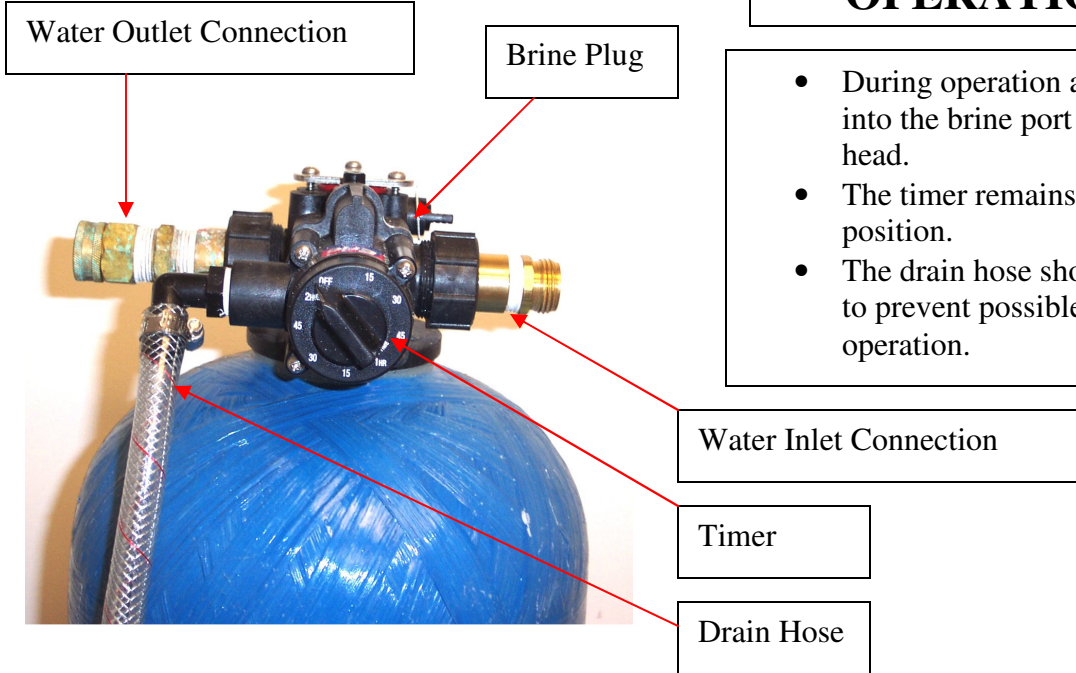

- During operation a plug is placed into the brine port on the softener head.
- The timer remains in the OFF position.
- The drain hose should be capped to prevent possible leakage during operation.

RECHARGING

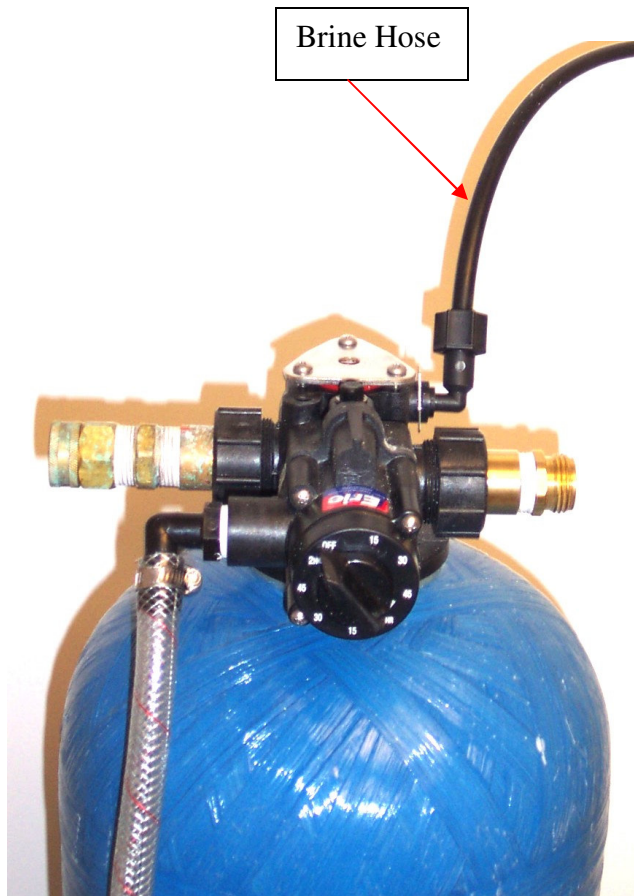

- During recharging the brine hose from the brine tank is placed into the brine port on the softener head.
- The brine tank is filled with salt.
- The water outlet hose is disconnected from the machine or water tank so that water cannot flow through the outlet.
- When the water is turned ON the brine tank will fill with water until the float valve shuts off the flow.
- The drain hose must be connected to the barb on the timer head and run to a drain.
- The timer is turned to the 1HR position.
- Water will flow out of the drain hose. The brine solution will be drawn from the tank, flushed through the softener and out the drain.
- When the timer turns off the flow through the drain hose will stop. Remove brine hose and replace plug. Reconnect outlet hose to machine and cap drain hose.