



AC24KIT – AIR MOVER CARPET CLAMP KIT

Kit includes:

- 1 - Carpet Clamp Assembly
- 2 – 10-32 x 1/2” Button Head Machine Socket SS Screw
- 4 – Rivets 3/16” x 1/2” Aluminum

Installation Instructions for Omni Dry & Phoenix Air Movers:

Use the two 10-32 x 1/2” screws included in the kit to secure the Carpet Clamp to the threaded anchors on the front of the air mover (FIG. 1 & 2). (The rivets will not be used)

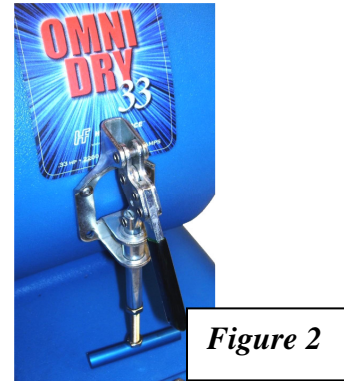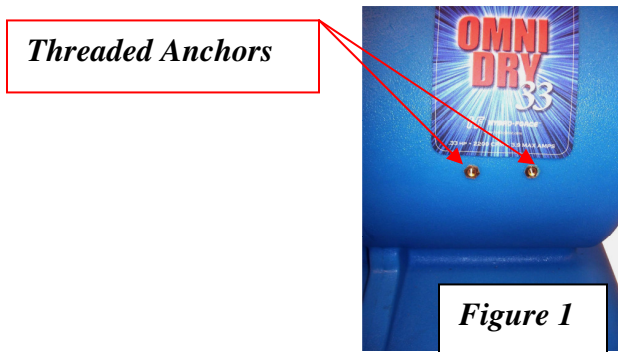

Installation Instructions for OmniDry 2.9 & other Air Movers:

With the lever down, place the Carpet Clamp assembly on the front of the air mover next to the center rib and mark the location of the four mounting holes (FIG 3 & 4). The mounting height can be adjusted by turning the threaded stud to shorten or lengthen the Carpet Clamp as needed for positioning. Use a 3/16” drill bit to drill the four holes (FIG 5). Secure the Carpet Clamp to the air mover using the four rivets included in the kit (FIG 6). (The screws will not be used)

